


FRONT FLOOR FOOTREST


COMPONENTS

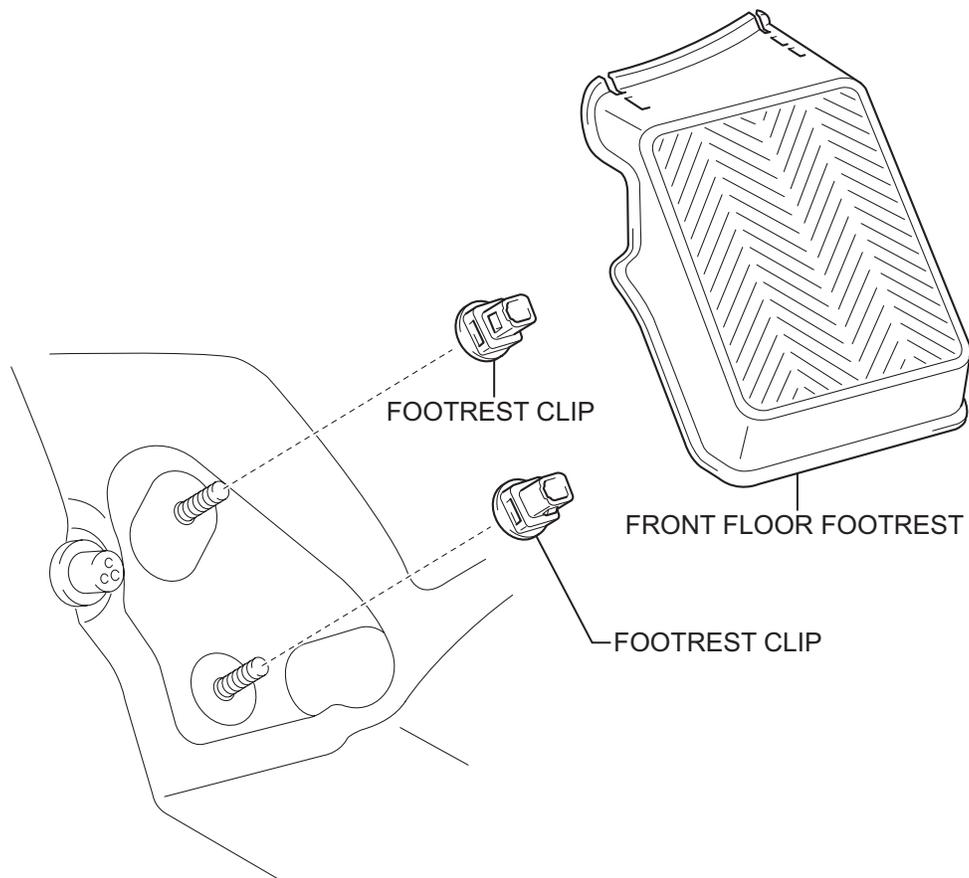

REMOVAL


1. REMOVE FRONT FLOOR FOOTREST

- (a) Disengage the 4 claws and remove the front floor footrest.

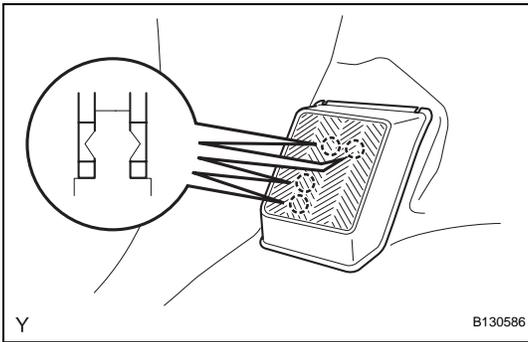

2. REMOVE FOOTREST CLIP

- (a) Remove the 2 footrest clips.

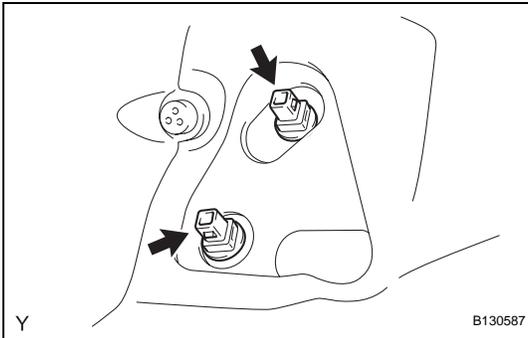


INSTALLATION

1. INSTALL FOOTREST CLIP

HINT:


Use the same procedure for both sides.

- (a) Engage the 2 claws and install the footrest clip.

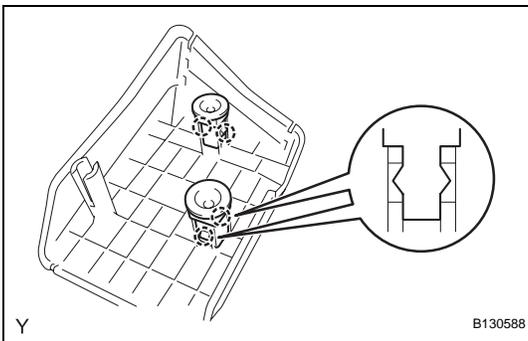


2. INSTALL FRONT FLOOR FOOTREST

- (a) Engage the 2 studs and install the front floor footrest.

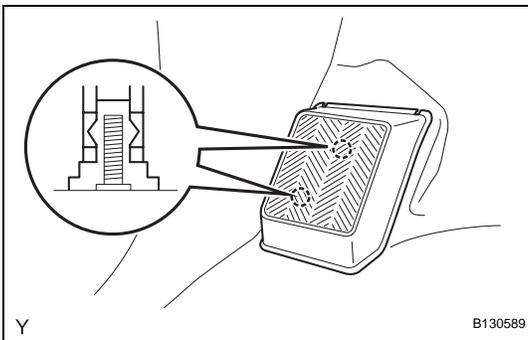


ROOF HEADLINING COMPONENTS

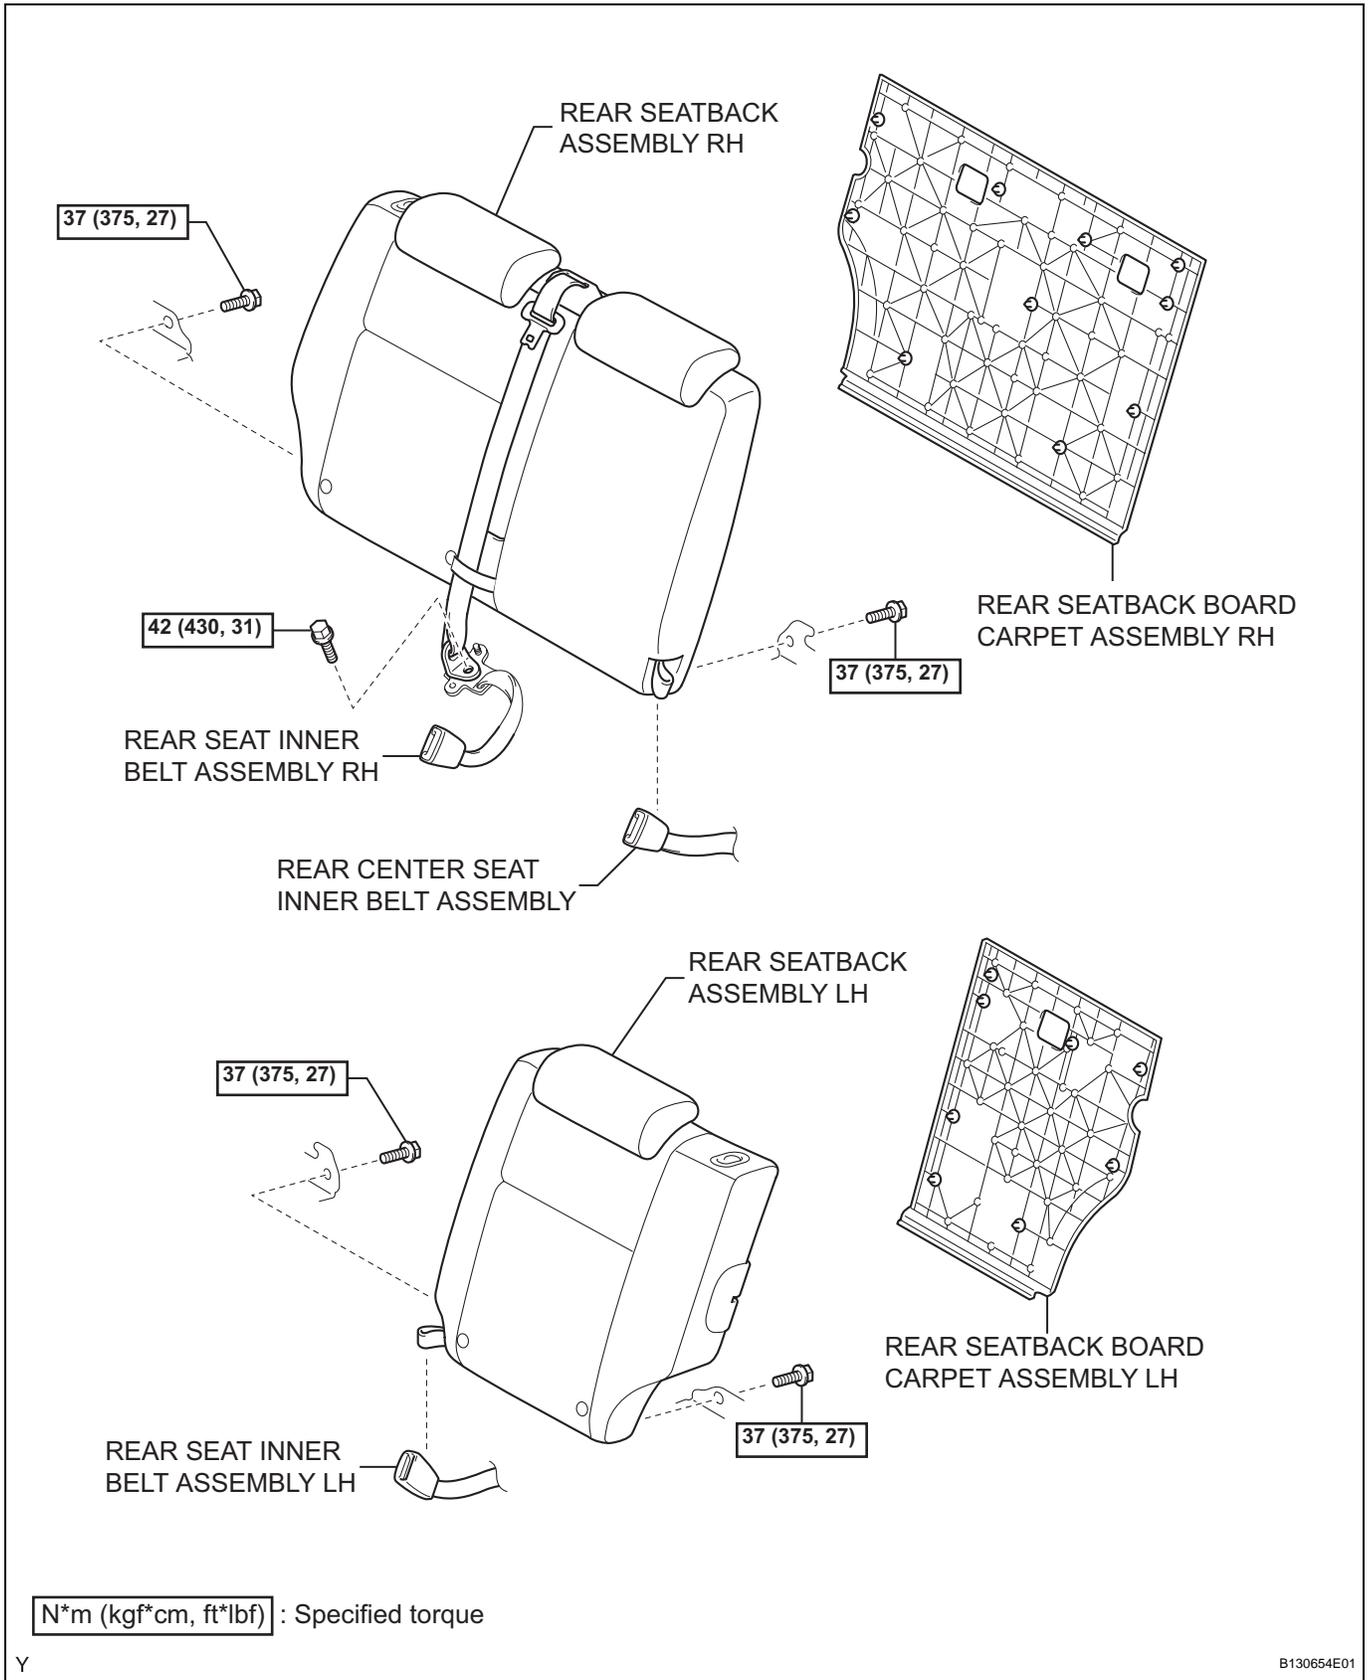



IR



Y

B130654E01

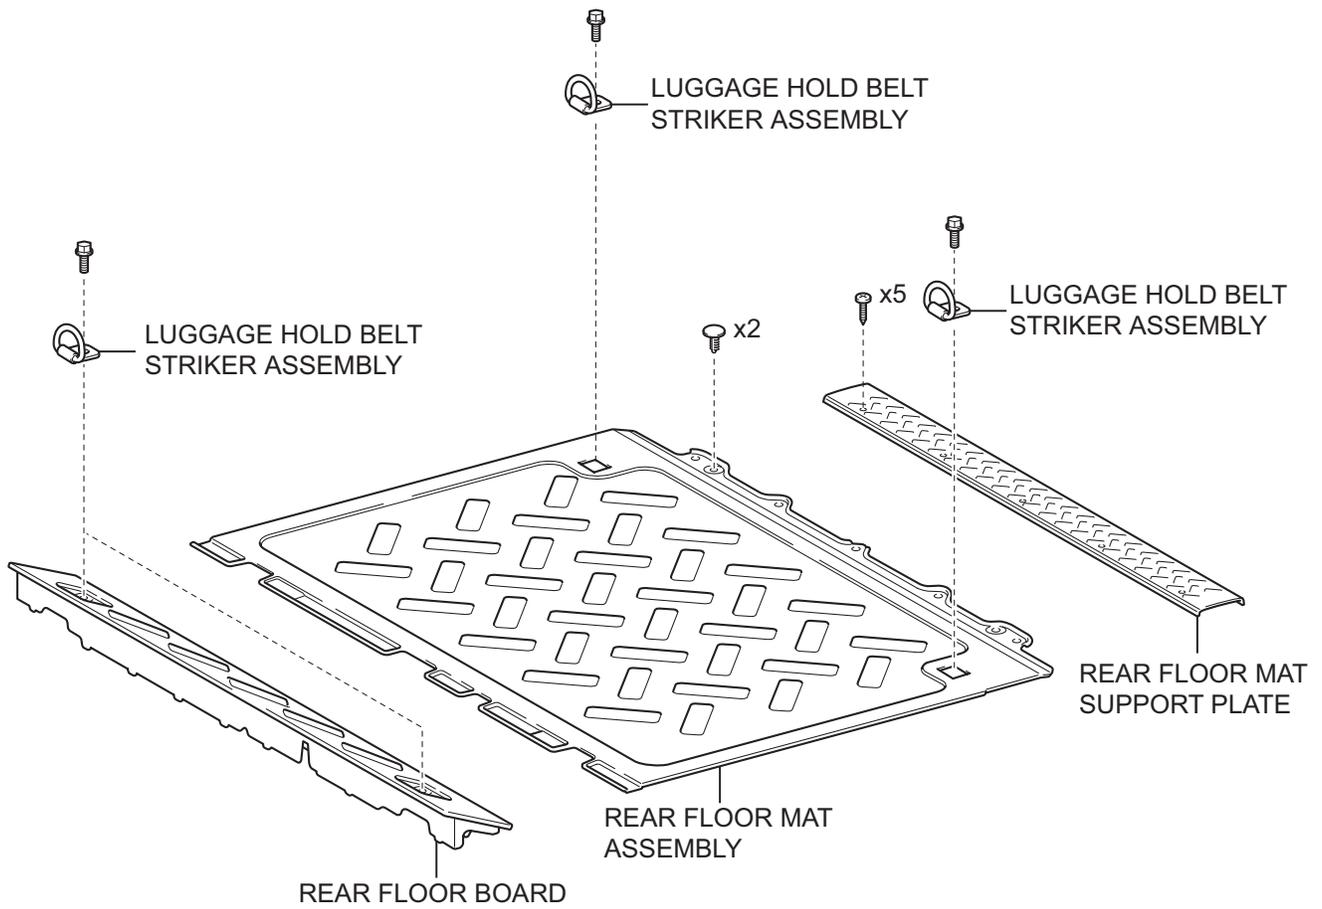


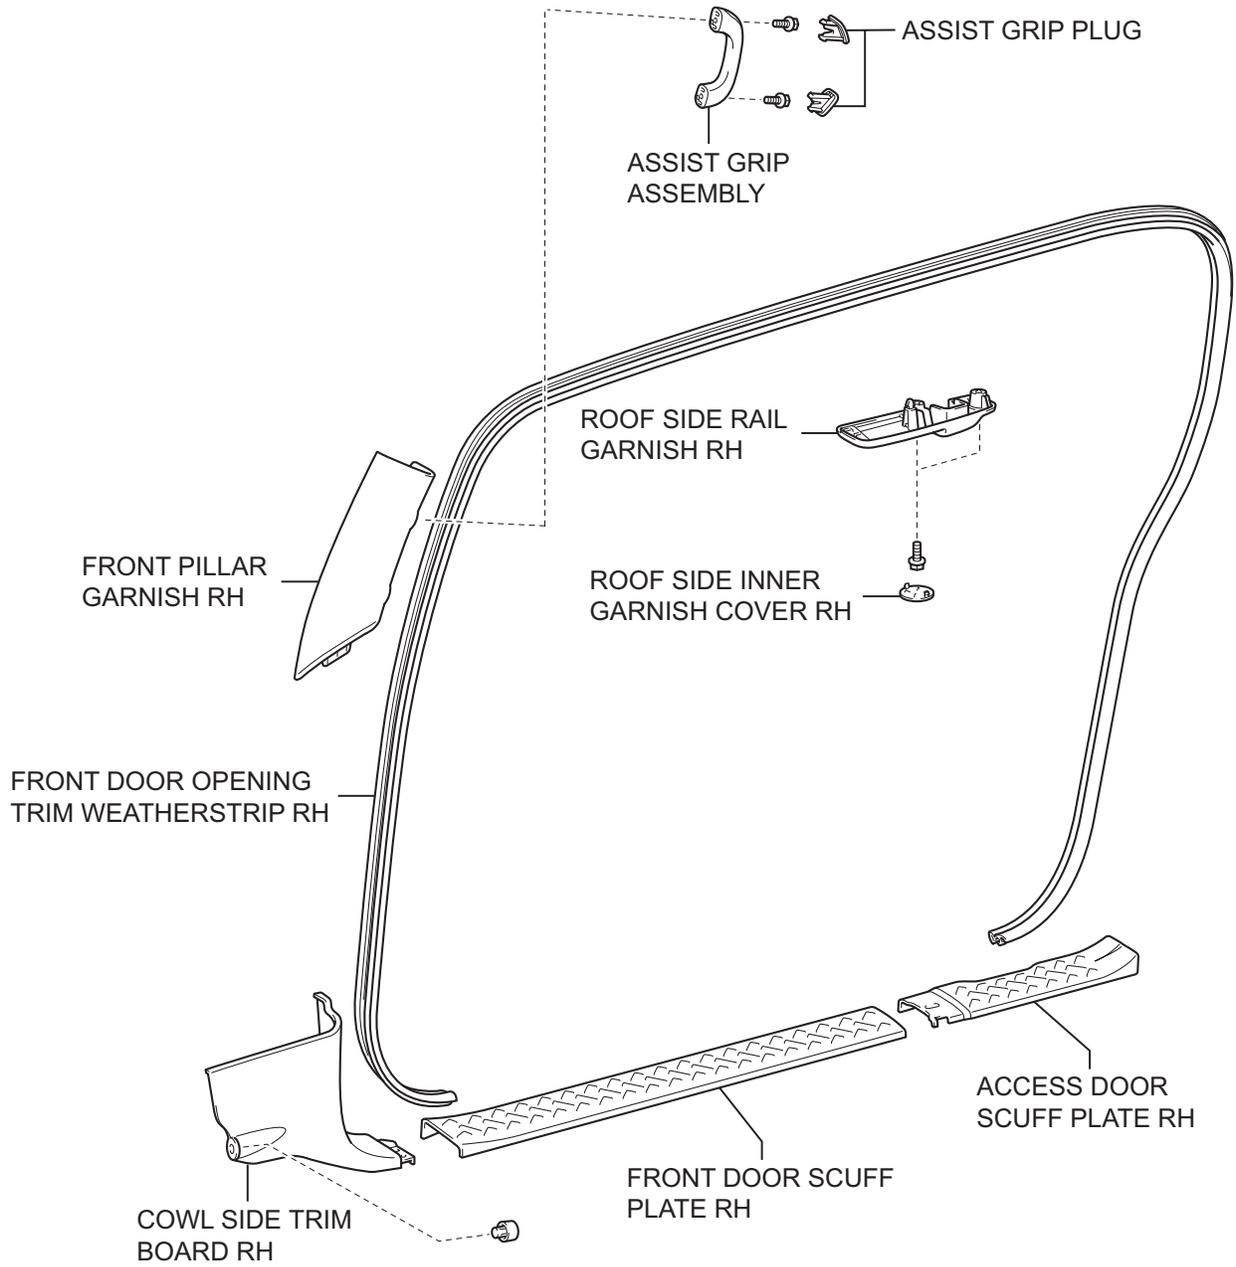

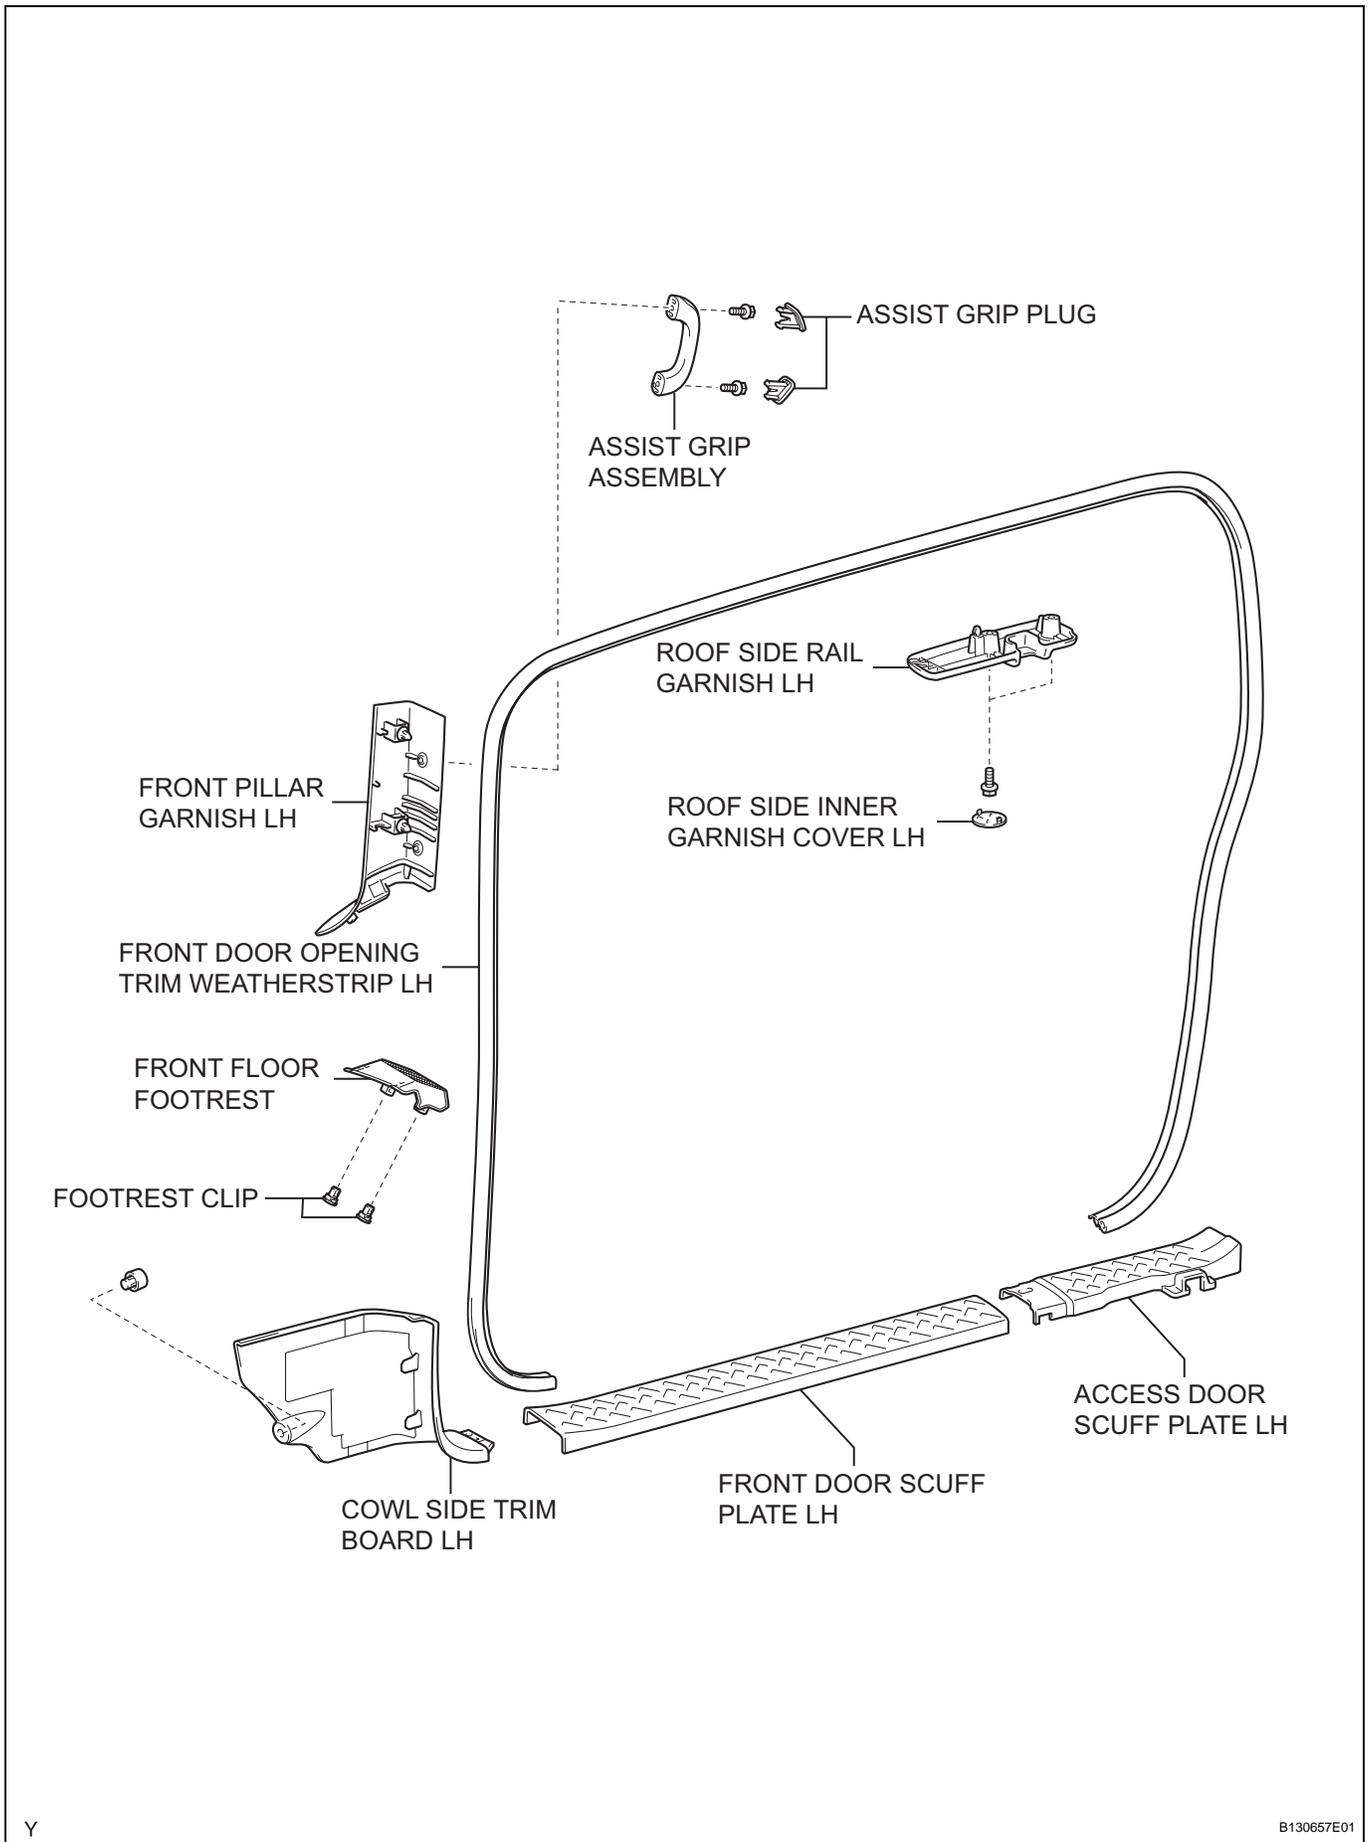

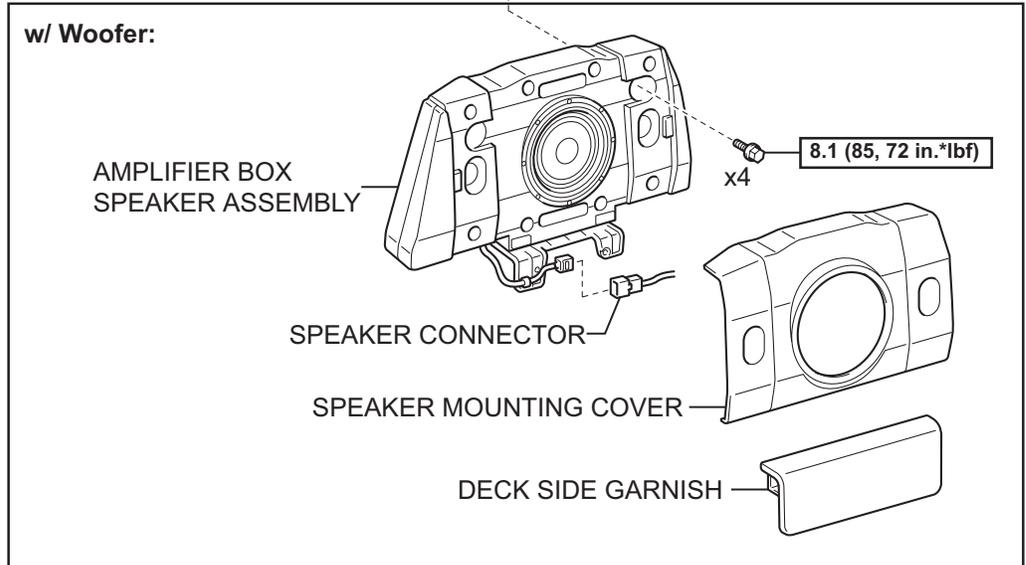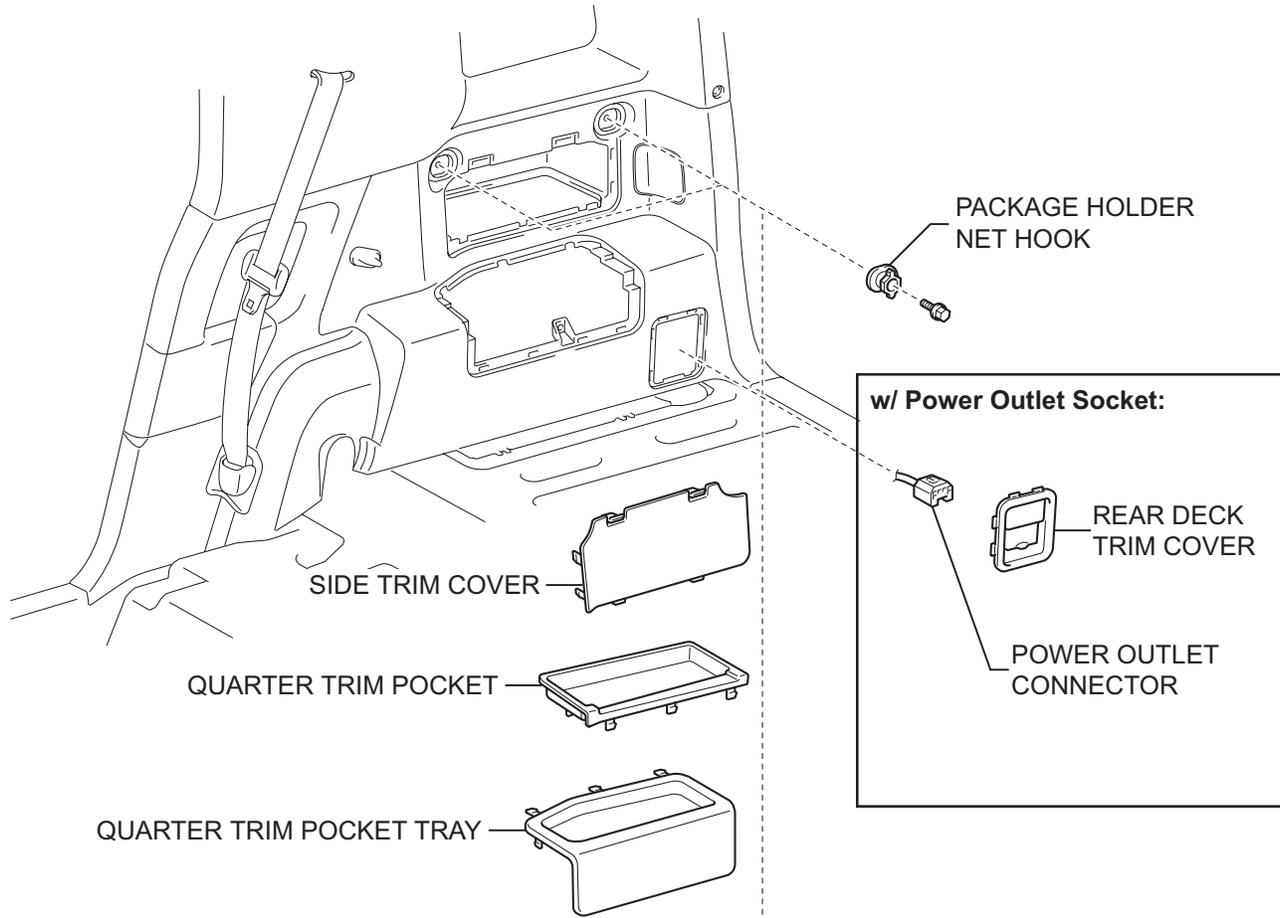


N*m (kgf*cm, ft*lbf) : Specified torque

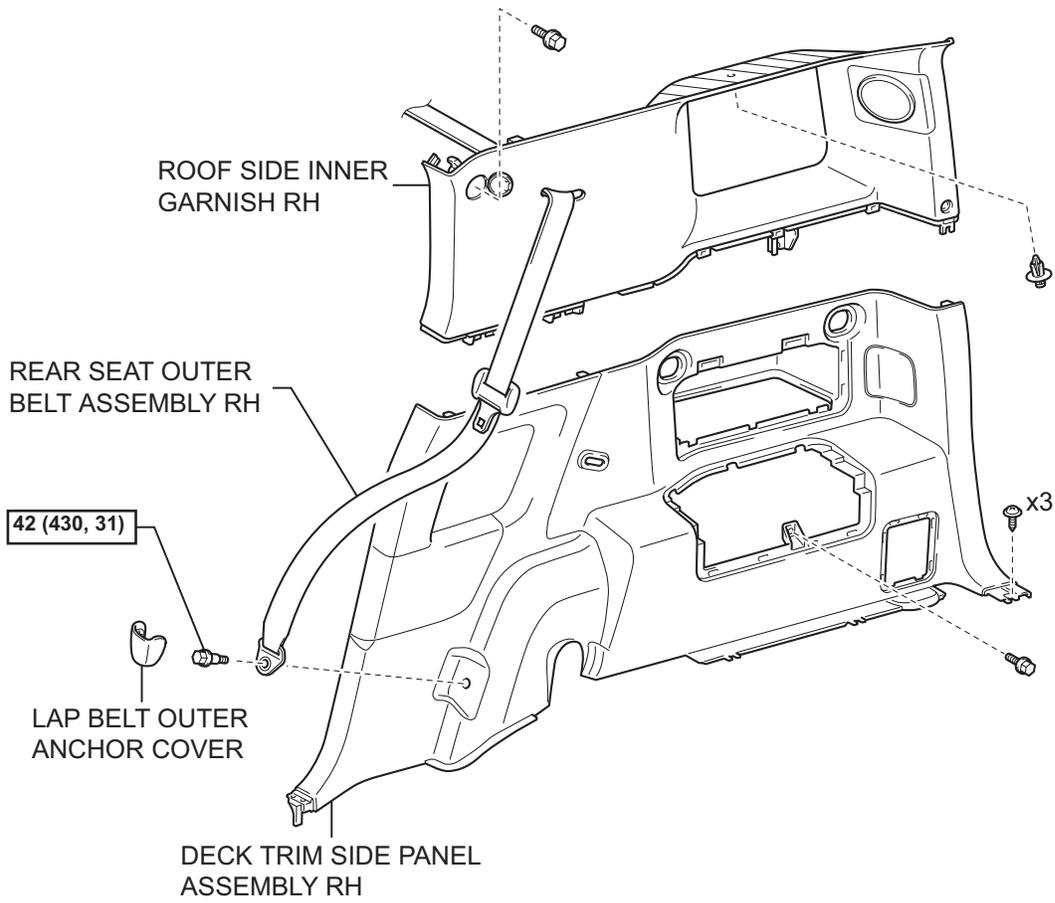



IR




$N \cdot m$ (kgf \cdot cm, ft \cdot lbf) : Specified torque

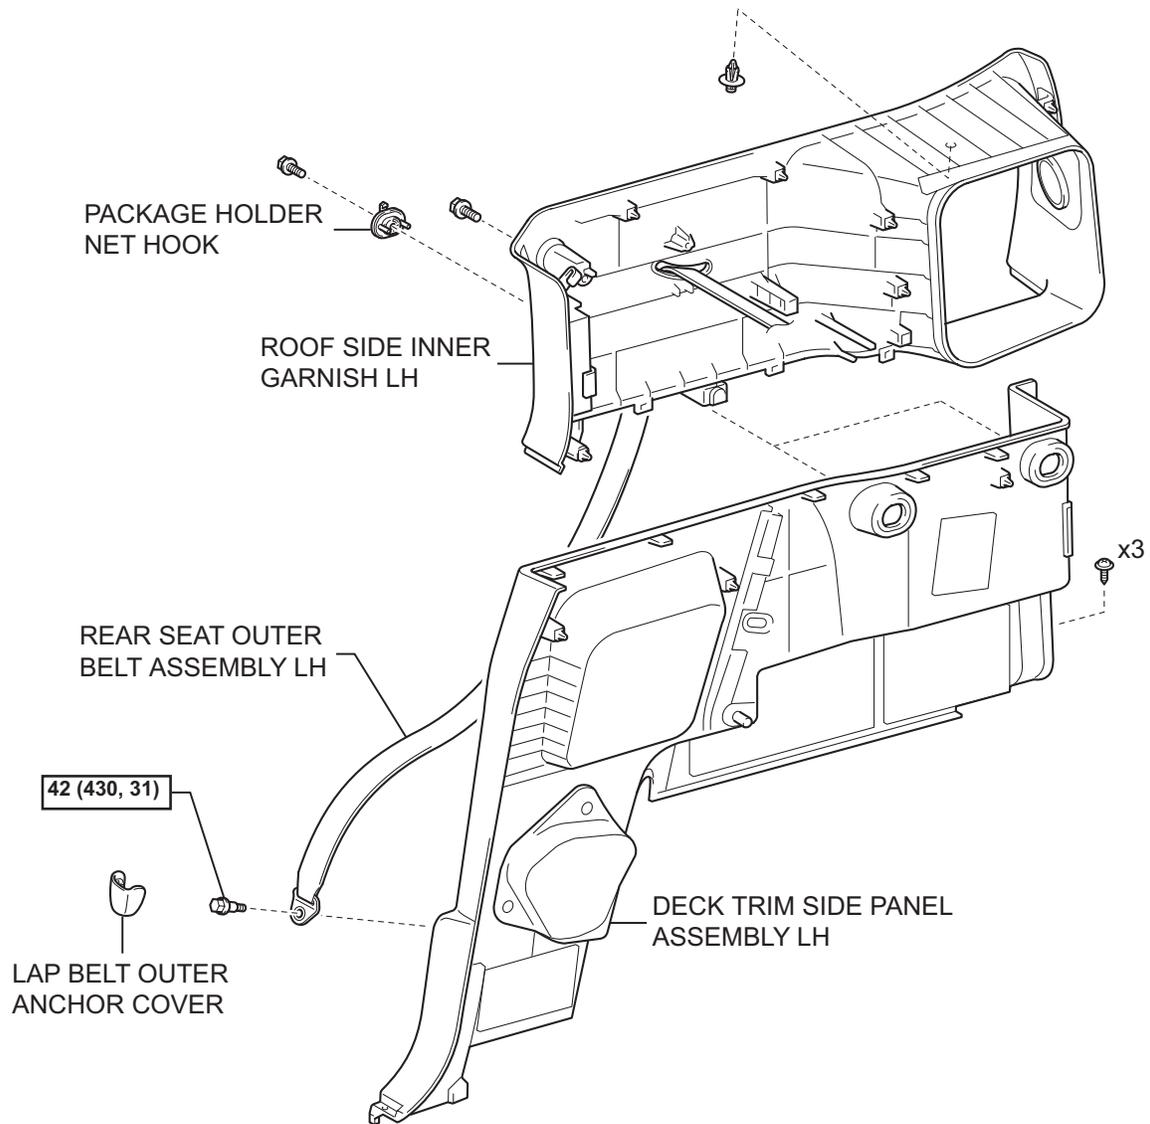

N*m (kgf*cm, ft*lb) : Specified torque

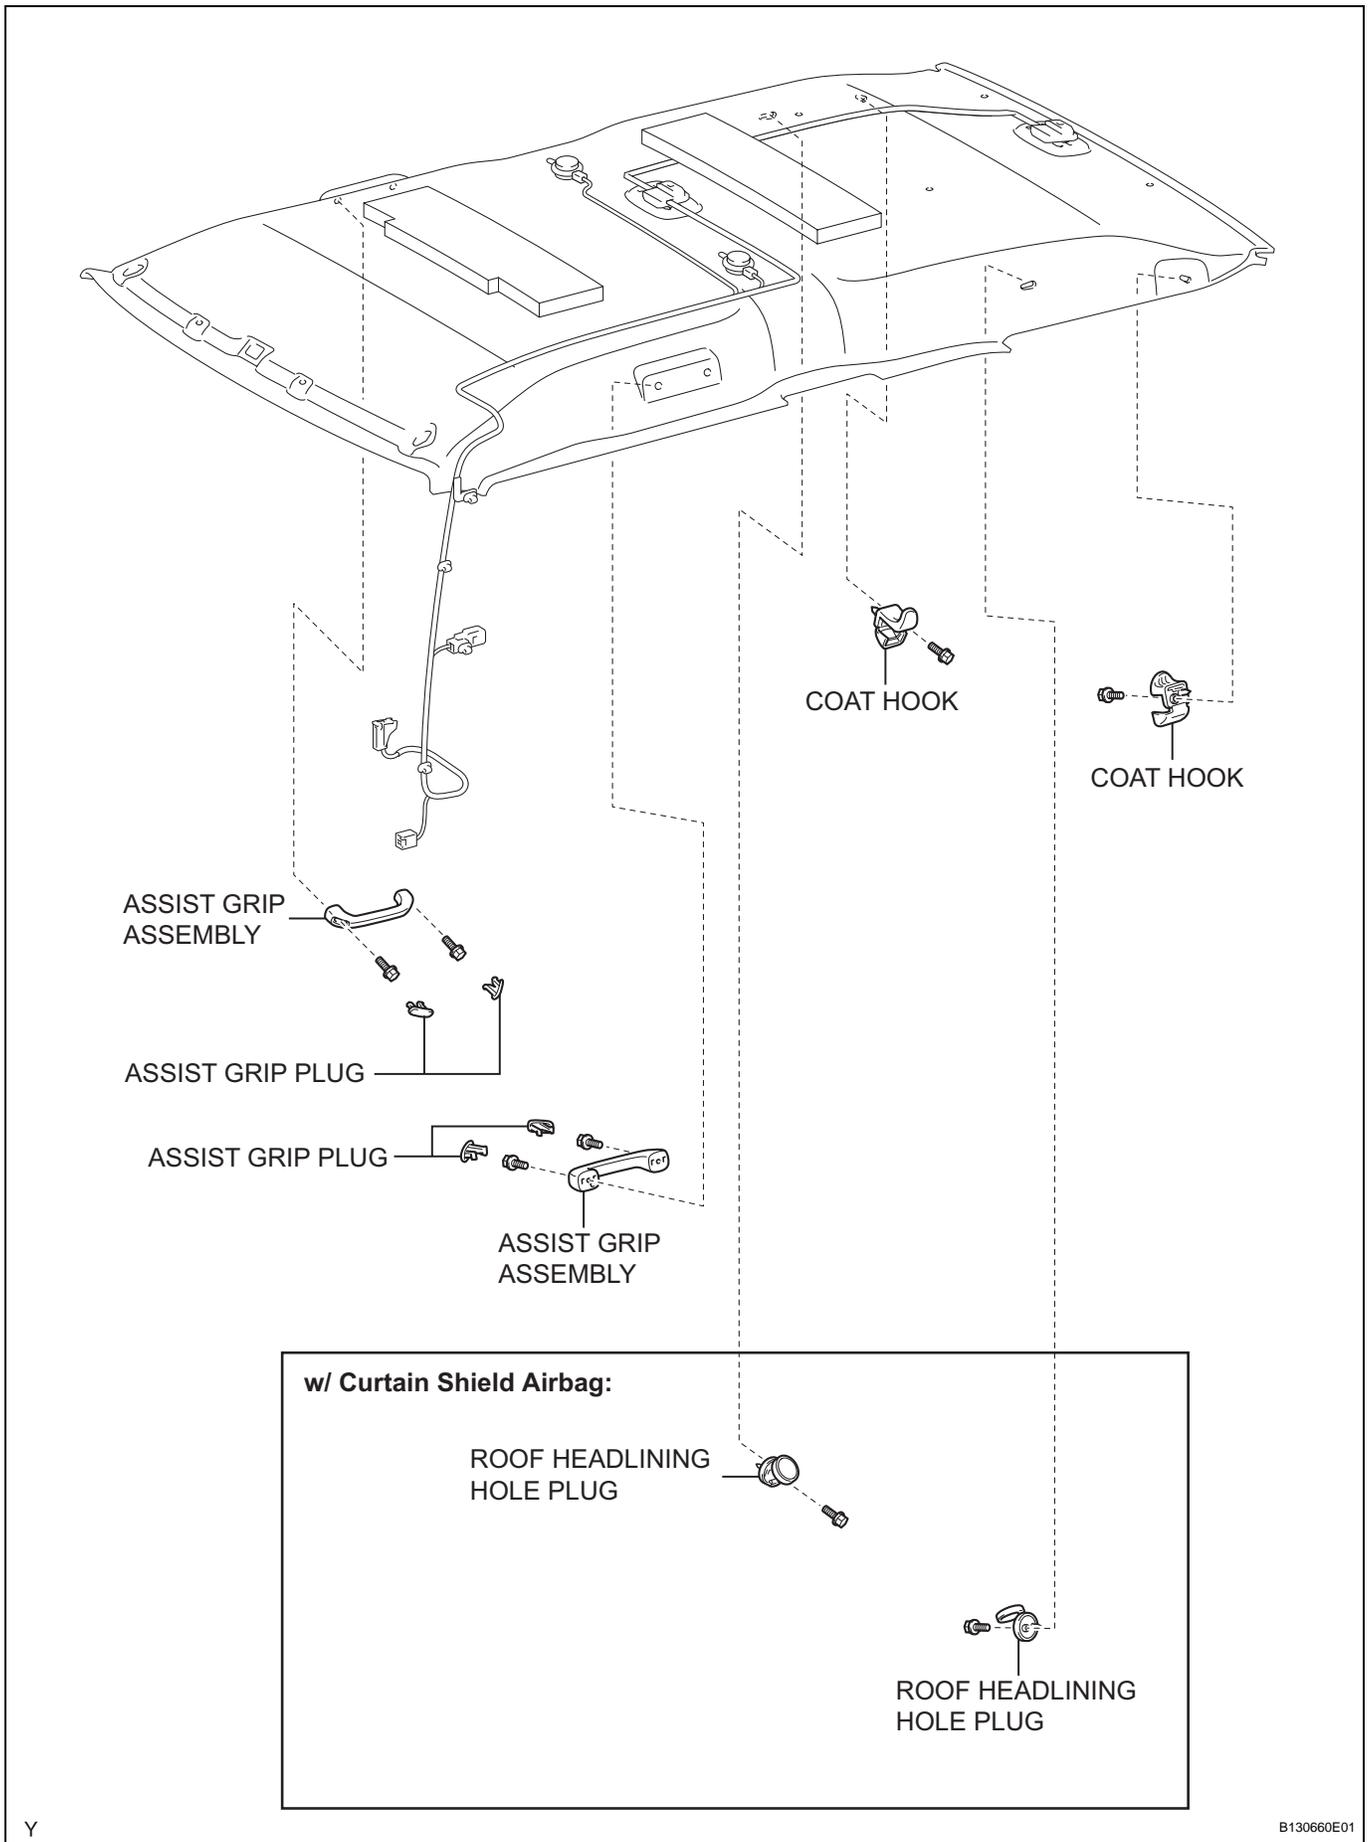

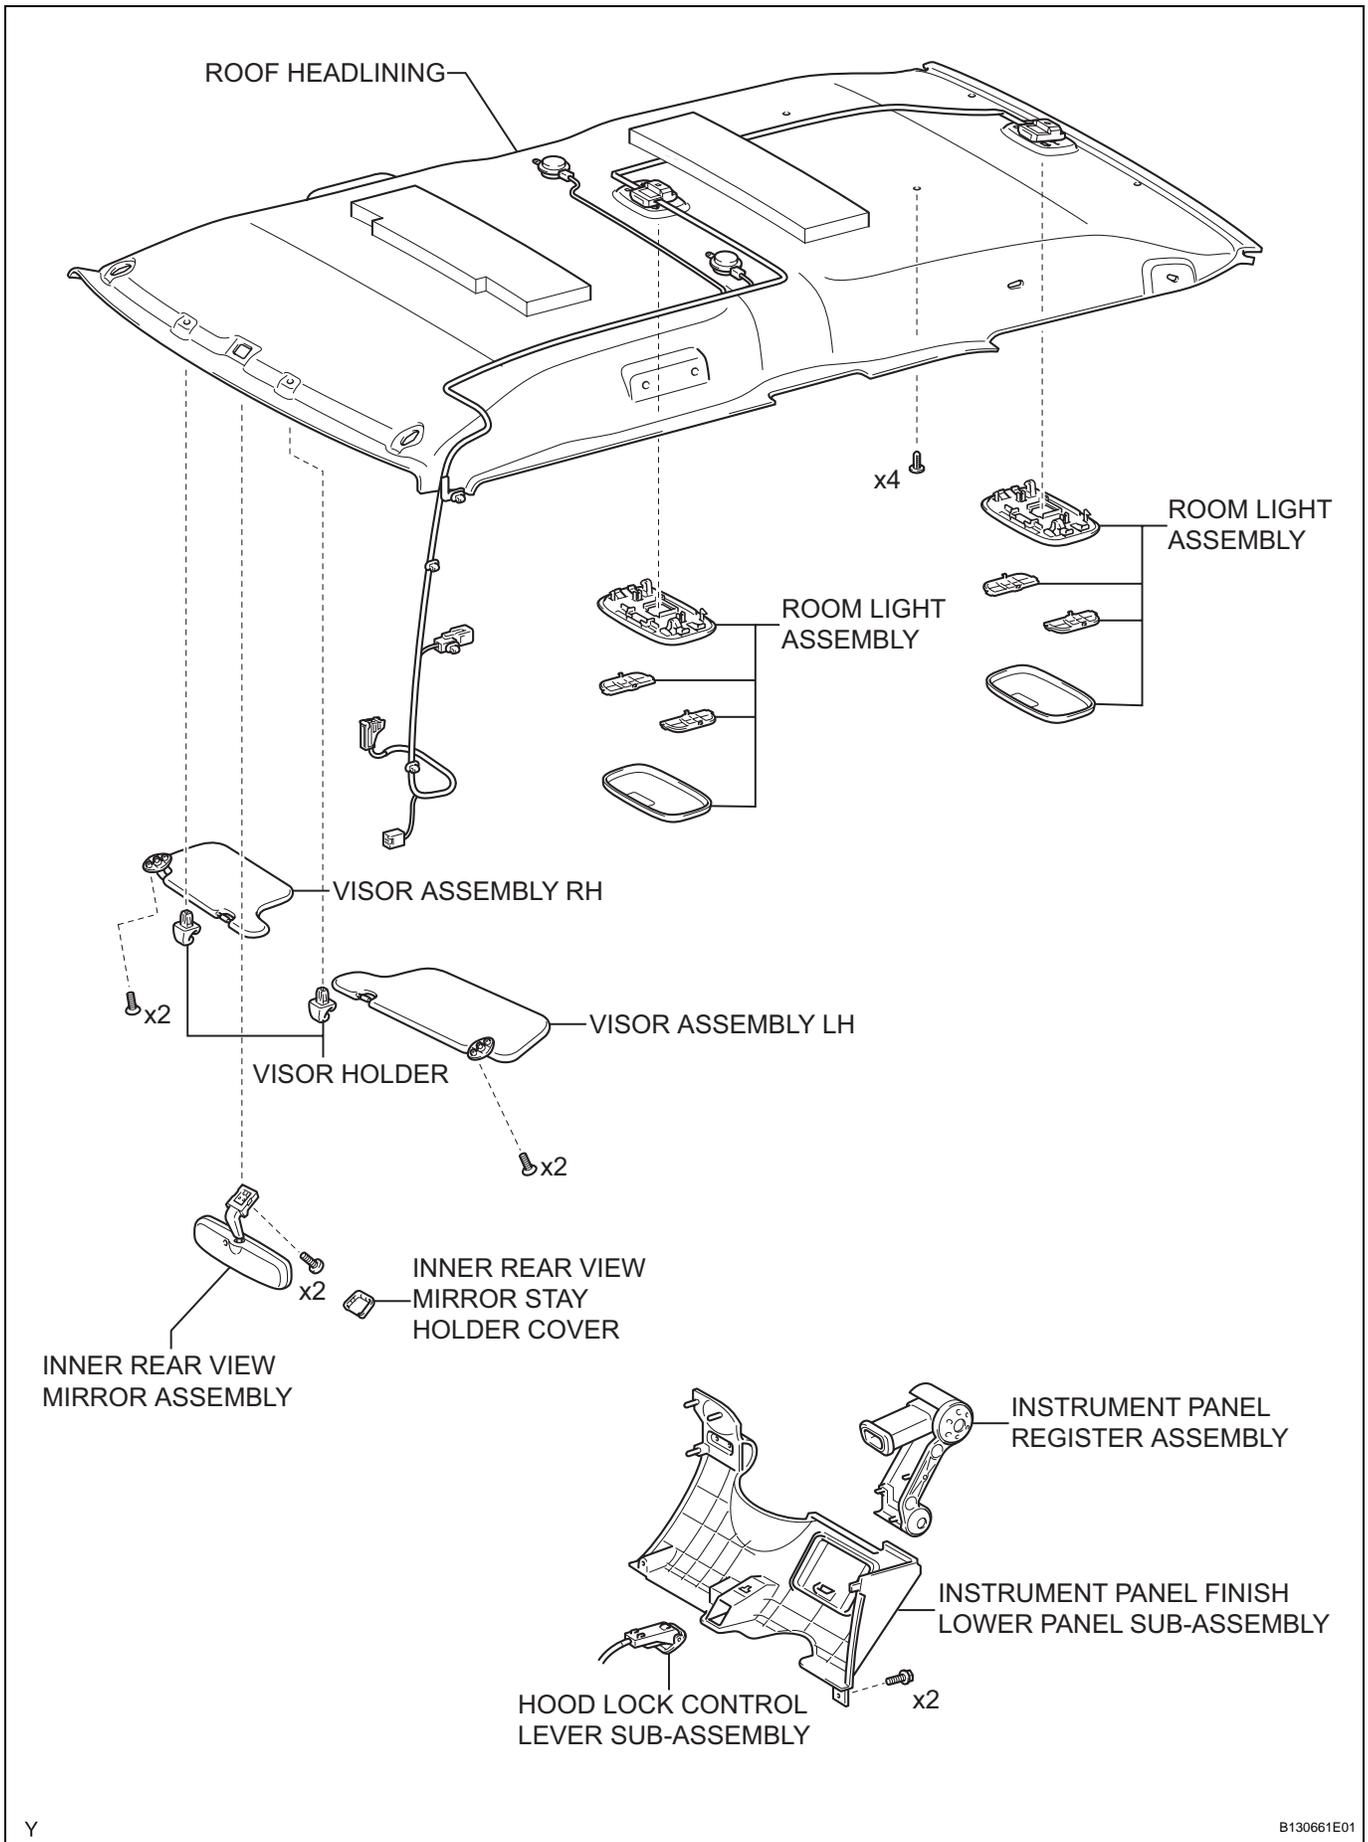

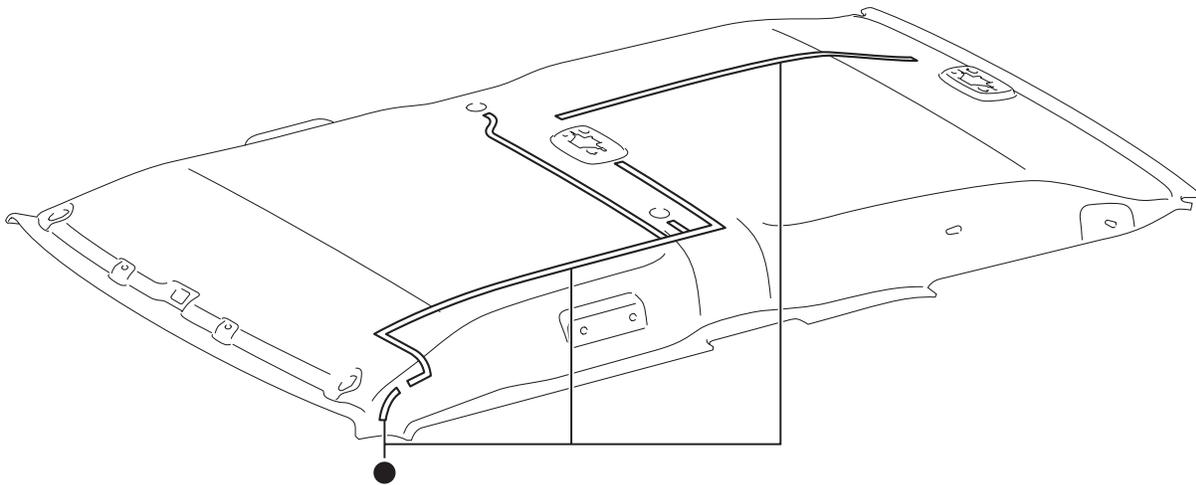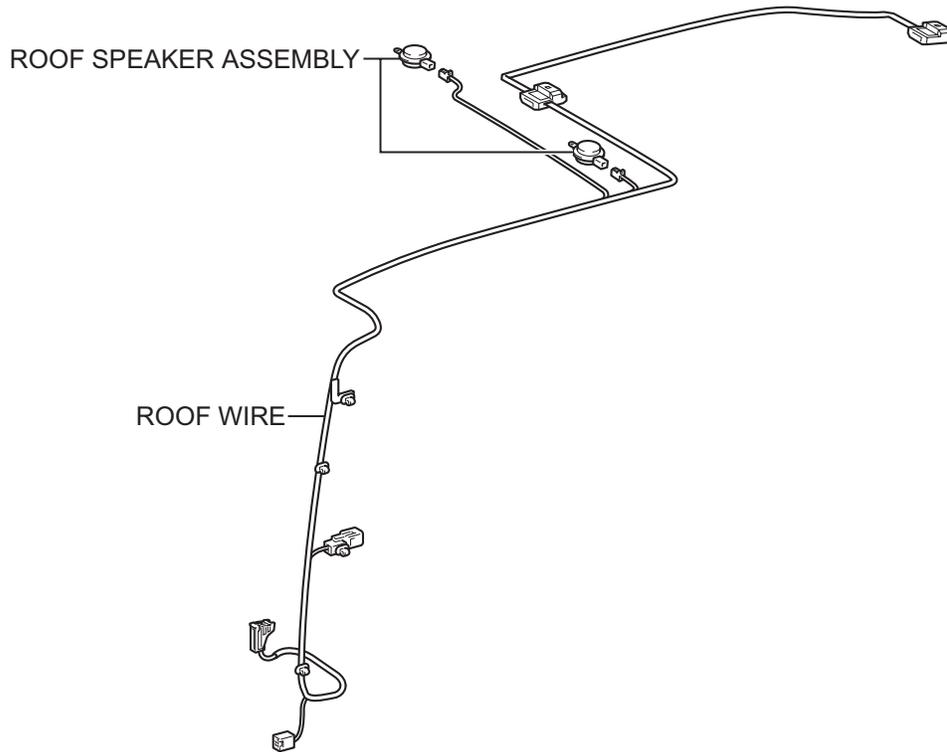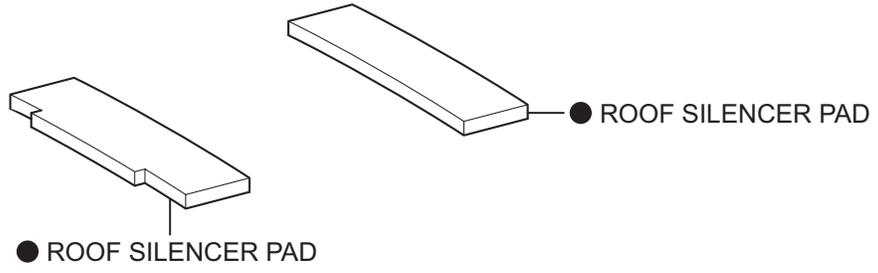



● Non-reusable part

IR


REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
2. REMOVE REAR SEATBACK BOARD CARPET ASSEMBLY RH (See page [SE-43](#))
3. REMOVE REAR SEATBACK ASSEMBLY RH (See page [SE-43](#))
4. REMOVE REAR SEATBACK BOARD CARPET ASSEMBLY LH (See page [SE-29](#))
5. REMOVE REAR SEATBACK ASSEMBLY LH (See page [SE-29](#))
6. REMOVE REAR FLOOR BOARD
 - (a) Remove the bolt and the luggage hold belt striker.

HINT:
Use the same procedure for both sides.

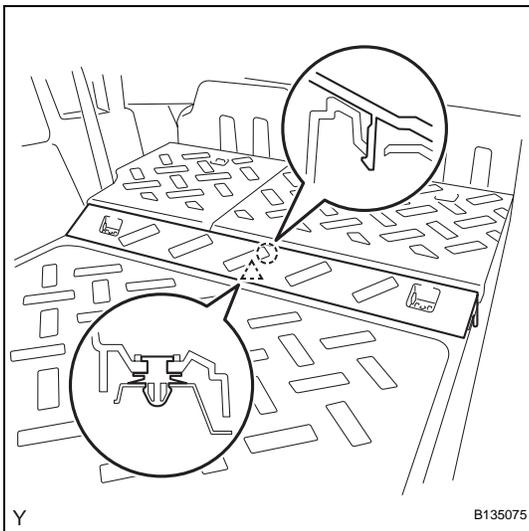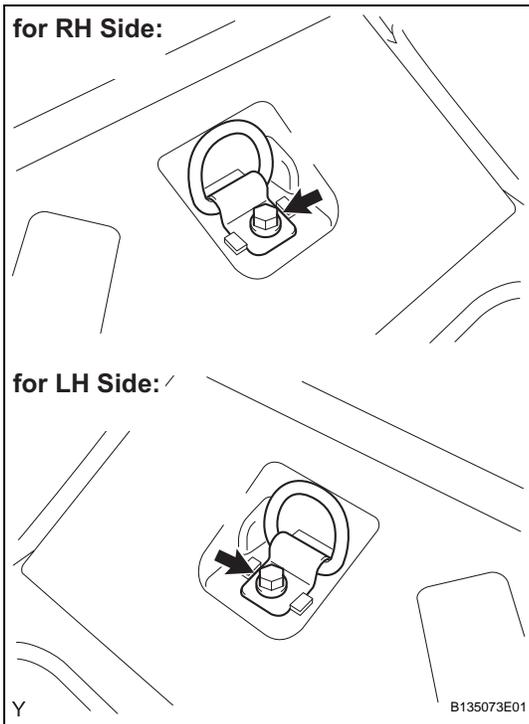


- (b) Disengage the clip and the claw and remove the rear floor board.

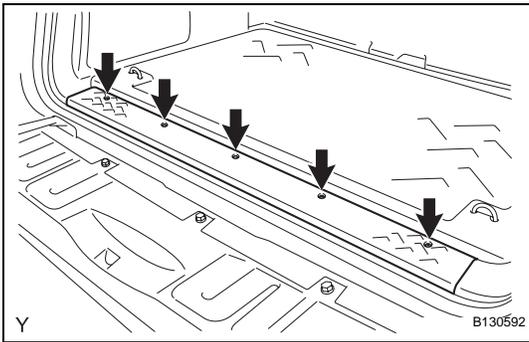


7. REMOVE REAR FLOOR MAT SUPPORT PLATE

(a) Remove the 5 screws.

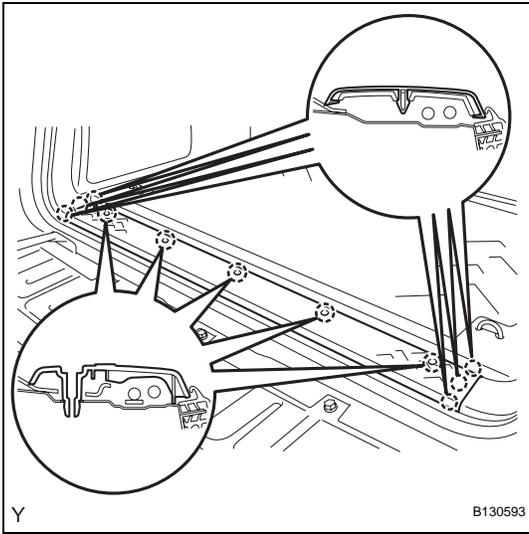

(b) Disengage the 11 claws and remove the rear floor mat support plate.

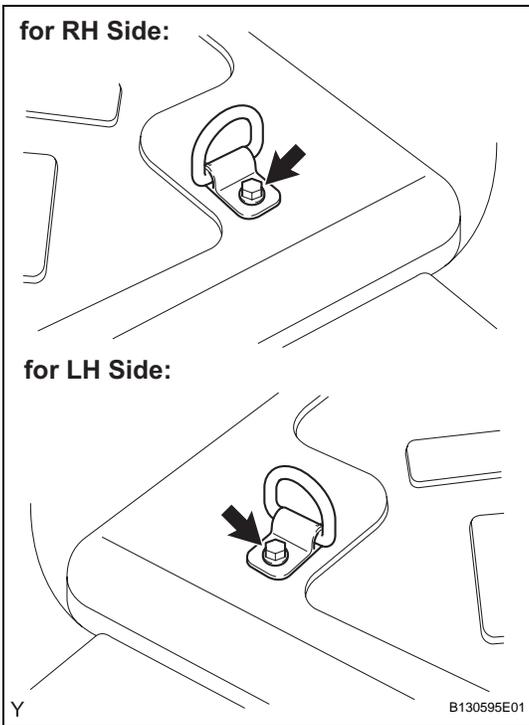


8. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY

HINT:


Use the same procedure for both sides.

(a) Remove the bolt and the luggage hold belt striker.

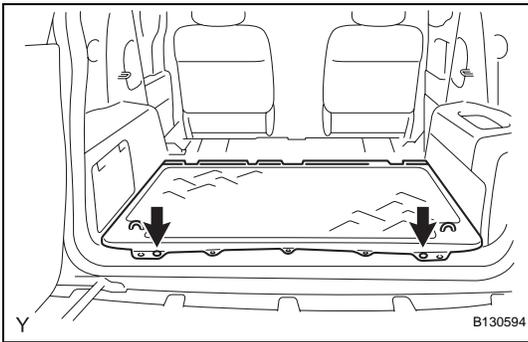

9. REMOVE REAR FLOOR MAT ASSEMBLY

- (a) Using a clip remover, remove the 2 clips and the rear floor mat.

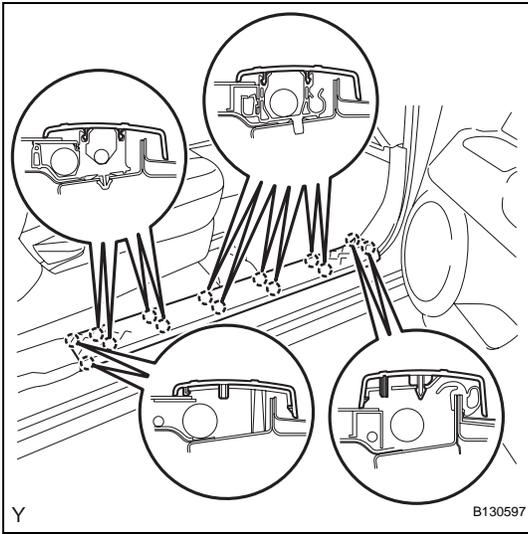


10. REMOVE FRONT DOOR SCUFF PLATE RH

- (a) Disengage the 14 claws and remove the front door scuff plate.

11. REMOVE FRONT DOOR SCUFF PLATE LH

- HINT:
Use the same procedure as for the RH side.

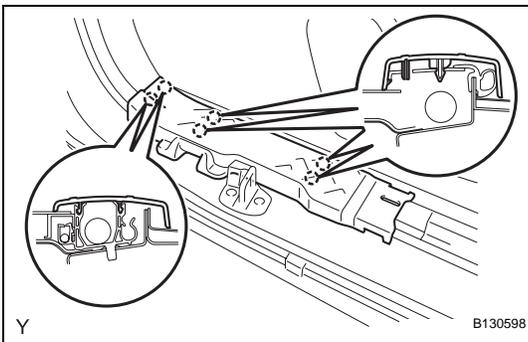

12. REMOVE ACCESS DOOR SCUFF PLATE RH


- (a) Disengage the 6 claws and remove the access door scuff plate.

13. REMOVE ACCESS DOOR SCUFF PLATE LH

- HINT:
Use the same procedure as for the RH side.

14. REMOVE FRONT FLOOR FOOTREST (See page IR-2)

15. REMOVE FOOTREST CLIP (See page IR-2)

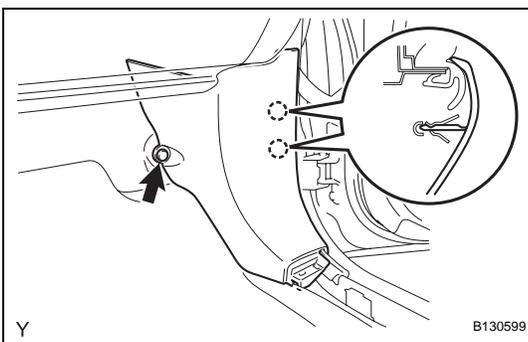


16. REMOVE COWL SIDE TRIM BOARD RH

- (a) Remove the clip.
- (b) Disengage the 2 claws and remove the cowl side trim board.

17. REMOVE COWL SIDE TRIM BOARD LH

- HINT:
Use the same procedure as for the RH side.

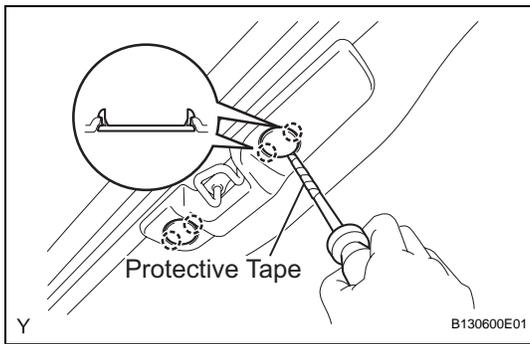**18. REMOVE ROOF SIDE INNER GARNISH COVER RH**

HINT:


Use the same procedure for both sides.

- (a) Using a screwdriver with its tip wrapped in protective tape, disengage the 2 claws and remove the roof side inner garnish cover.

19. REMOVE ROOF SIDE INNER GARNISH COVER LH

HINT:

Use the same procedure as for the RH side.

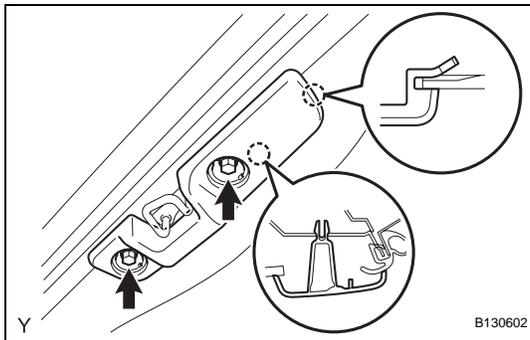**20. REMOVE ROOF SIDE RAIL GARNISH RH**


- (a) Remove the 2 bolts.

- (b) Disengage the 2 claws and remove the roof side rail garnish.

21. REMOVE ROOF SIDE RAIL GARNISH LH

HINT:

Use the same procedure as for the RH side.

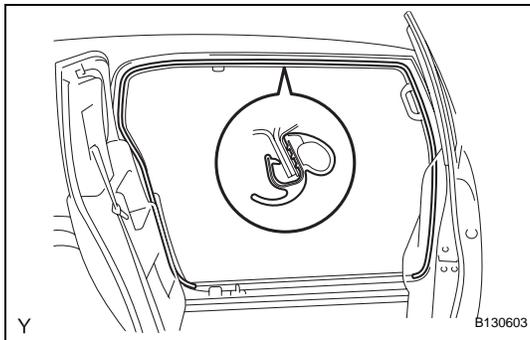**22. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH**


- (a) Remove the front door opening trim weatherstrip.

23. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH


HINT:

Use the same procedure as for the RH side.

for RH Side:

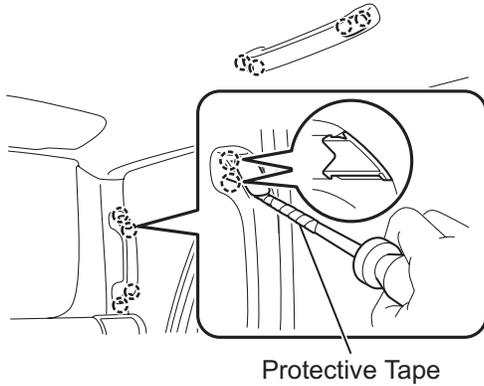

for LH Side:

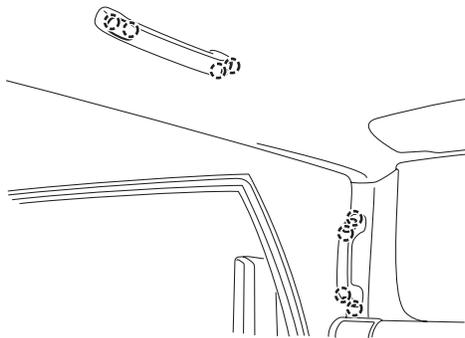

Y

B134994E01


24. REMOVE ASSIST GRIP PLUG

HINT:


Use the same procedure to remove all the assist grip plugs.

- (a) Using a screwdriver with its tip wrapped in protective tape, disengage the 2 claws and remove the assist grip plug.

for RH Side:

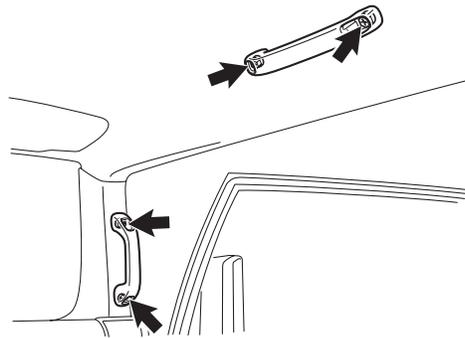

for LH Side:

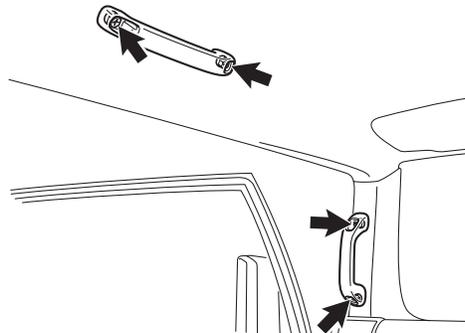

Y


B134995E01

25. REMOVE ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to remove all the assist grips.

- (a) Remove the 2 screws and the assist grip.

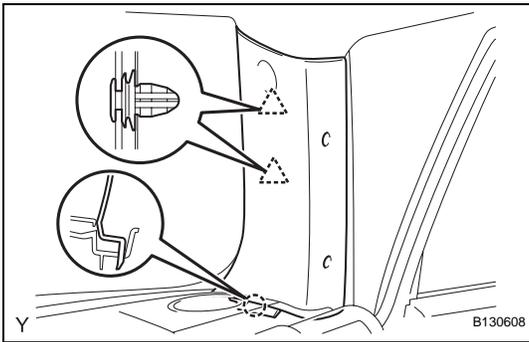
**26. REMOVE FRONT PILLAR GARNISH RH**

- (a) Disengage the 2 clips and the claw and remove the front pillar garnish.


27. REMOVE FRONT PILLAR GARNISH LH

HINT:

Use the same procedure as for the RH side.

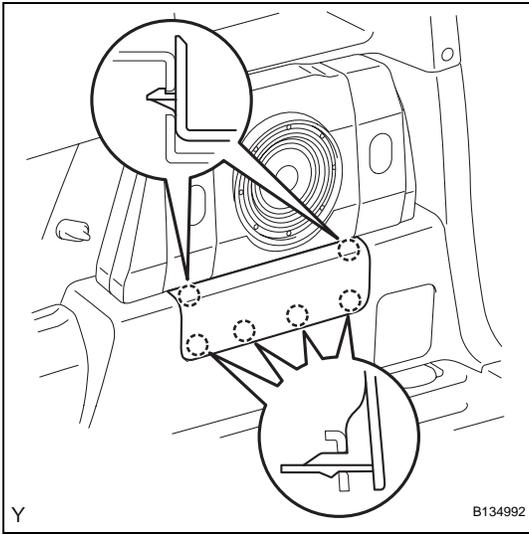**28. REMOVE DECK SIDE GARNISH (w/ Woofer)**


- (a) Disengage the 6 claws and remove the rear deck side garnish.

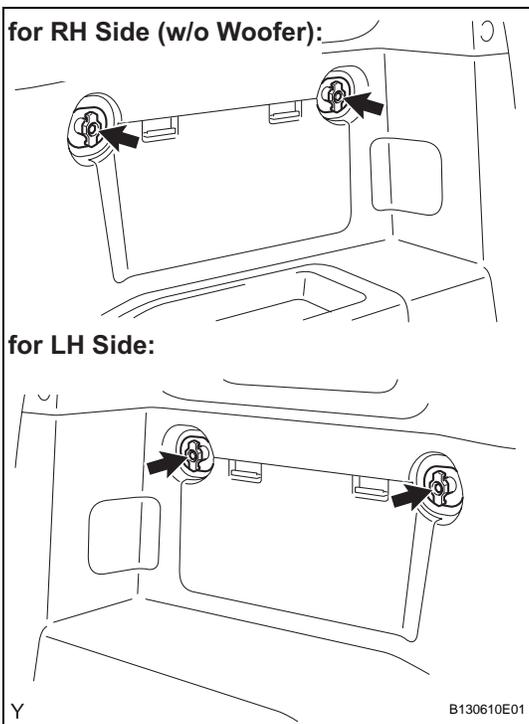29. REMOVE SPEAKER MOUNTING COVER (w/ Woofer)
(See page [AV-90](#))**30. REMOVE AMPLIFIER BOX SPEAKER ASSEMBLY (w/ Woofer)** (See page [AV-90](#))**31. REMOVE PACKAGE HOLDER NET HOOK**

HINT:


Use the same procedure to remove all the package holder net hooks.

- (a) Remove the screw and the package holder net hook.

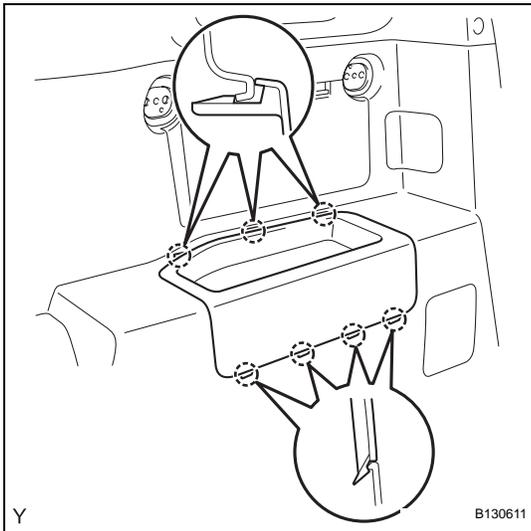


32. REMOVE QUARTER TRIM POCKET TRAY (w/o Woofer)

- (a) Disengage the 7 claws and remove the quarter trim pocket tray.

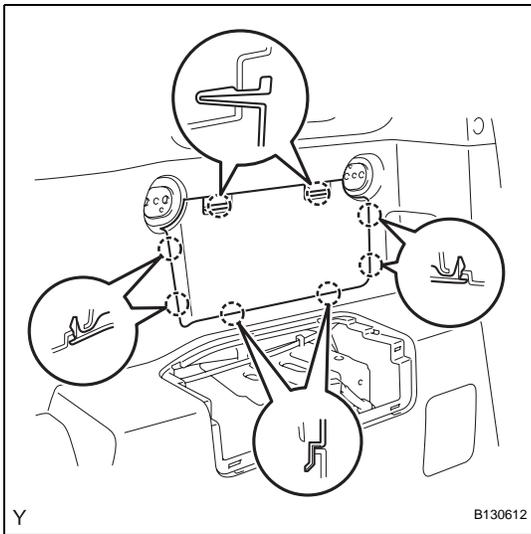


33. REMOVE SIDE TRIM COVER (w/o Woofer)

- (a) Disengage the 8 claws and remove the side trim cover.

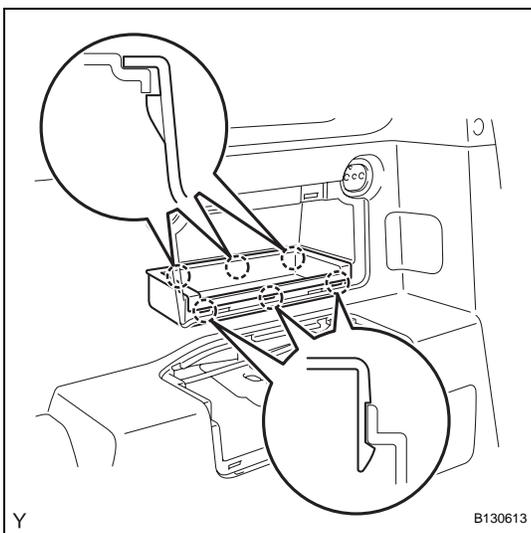

34. REMOVE QUARTER TRIM POCKET (w/o Woofer)

- (a) Disengage the 6 claws and remove the quarter trim pocket.

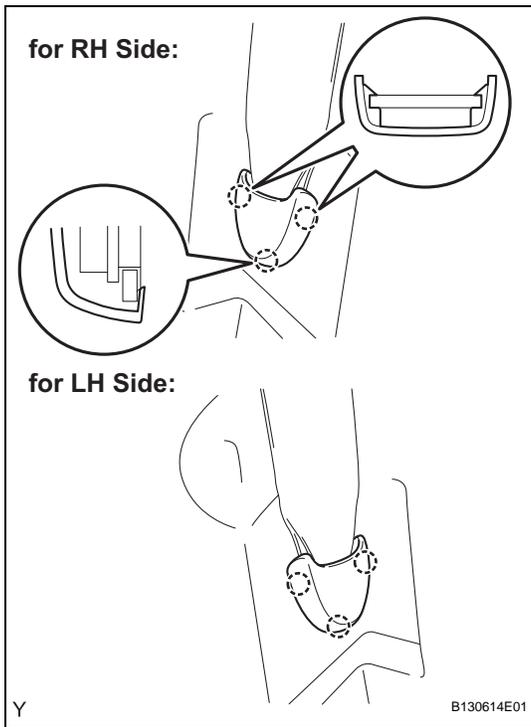


35. REMOVE LAP BELT OUTER ANCHOR COVER

HINT:

Use the same procedure for both sides.

- (a) Disengage the 3 claws and remove the lap belt outer anchor cover.

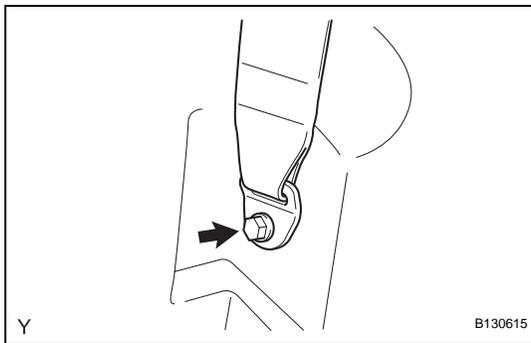


36. REMOVE REAR SEAT OUTER BELT ASSEMBLY RH

- (a) Remove the bolt and the anchor plate.

37. REMOVE REAR SEAT OUTER BELT ASSEMBLY LH


HINT:

Use the same procedure as for the RH side.

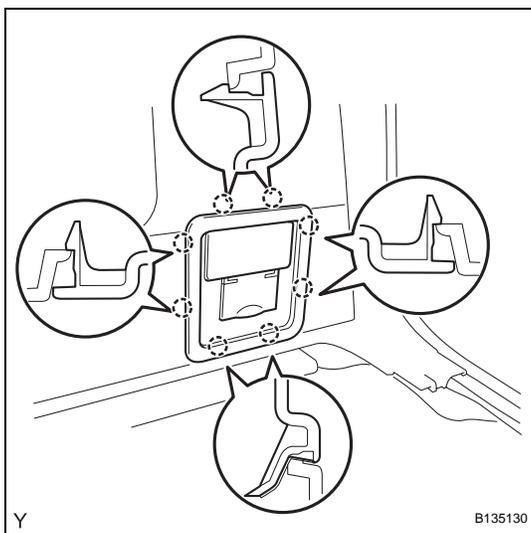


38. REMOVE REAR DECK TRIM COVER (w/ Power Outlet Socket)

- (a) Disengage the 8 claws and remove the rear deck trim cover.

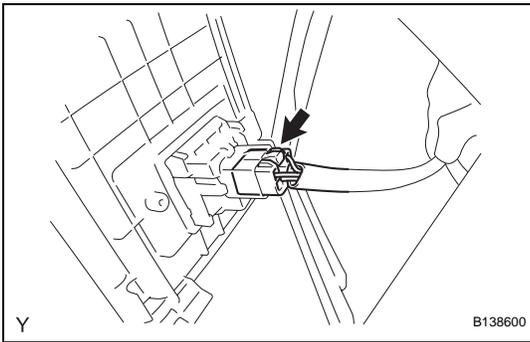


(b) Disconnect the power outlet connector.

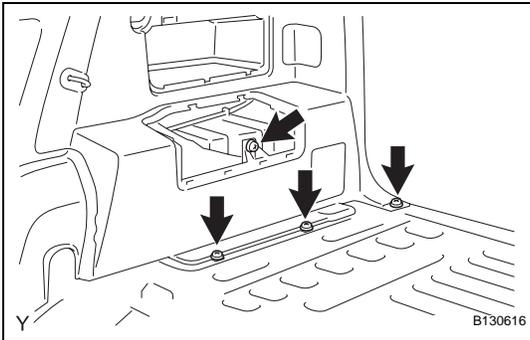


39. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH

(a) Remove the 4 screws.

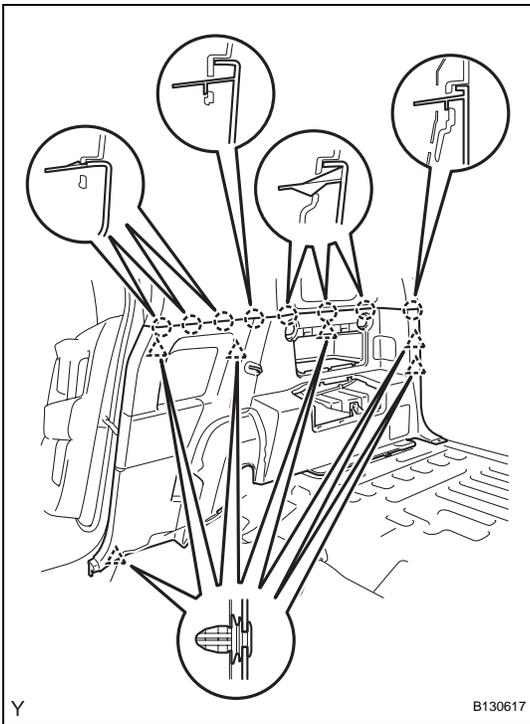


(b) Disengage the 6 clips and the 8 claws and remove the deck trim side panel.

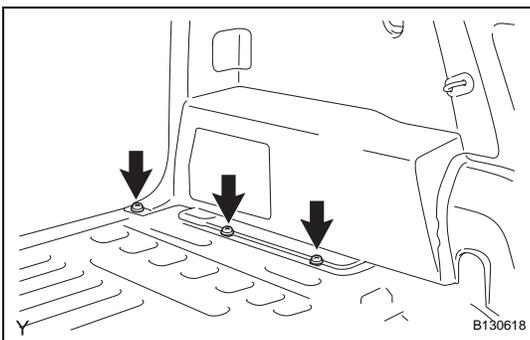


40. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH

(a) Remove the 3 screws.

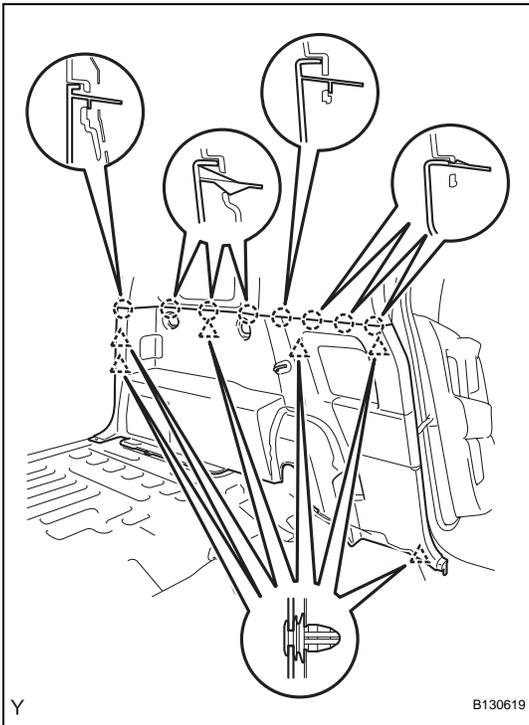


- (b) Disengage the 6 clips and the 8 claws and remove the deck trim side panel.

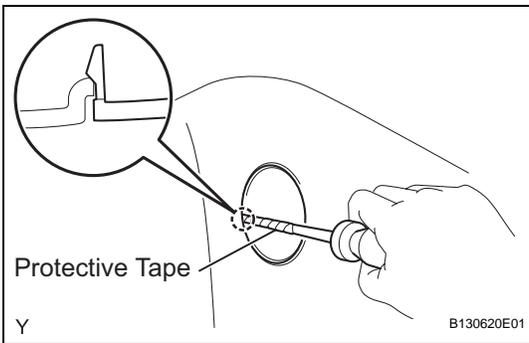

41. REMOVE ROOF SIDE INNER GARNISH RH


- (a) Using a screwdriver with its tip wrapped in protective tape, disengage the claw and open the cover.

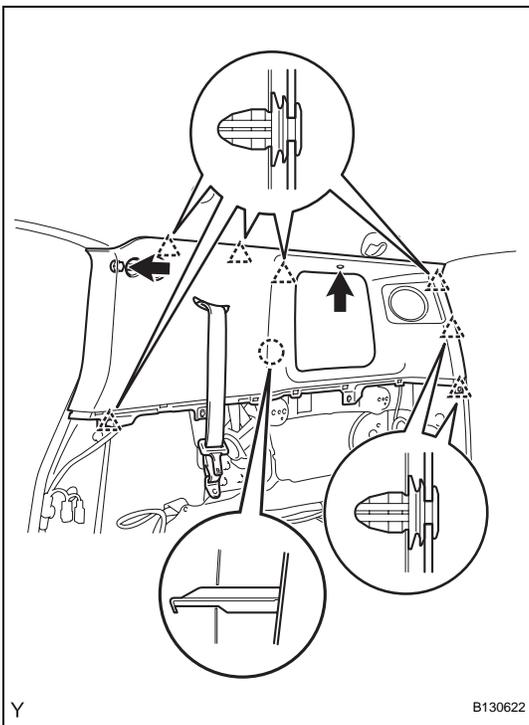

- (b) Remove the bolt and the clip.
- (c) Disengage the 7 clips and the claw and remove the roof side inner garnish.
- (d) Pass the rear seat outer belt through the slit in the roof side inner garnish.

42. REMOVE ROOF SIDE INNER GARNISH LH

HINT:
Use the same procedure as for the RH side.

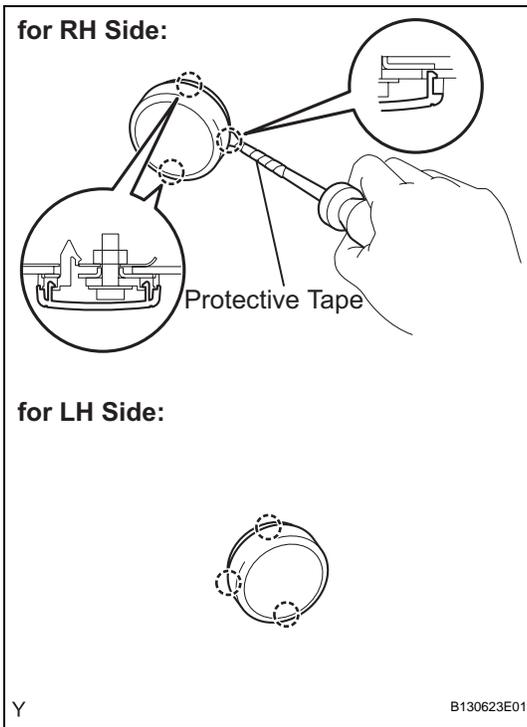


43. REMOVE ROOF HEADLINING HOLE PLUG

HINT:


Use the same procedure for both sides.

- (a) Using a screwdriver with its tip wrapped in protective tape, disengage the 3 claws and open the cover.

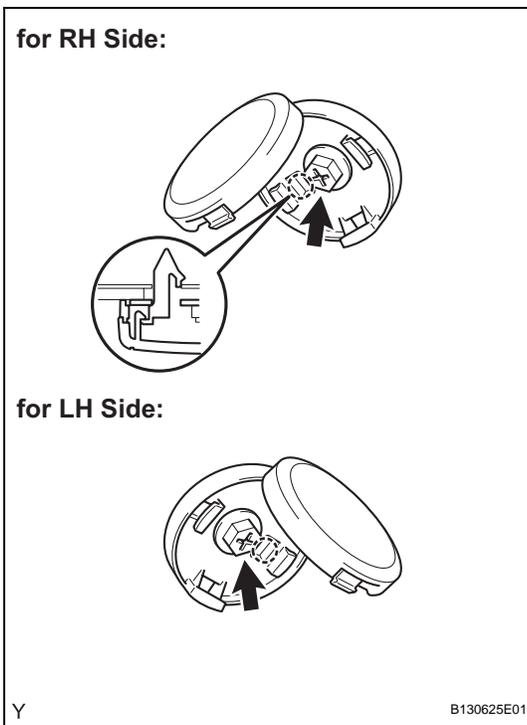

- (b) Remove the bolt.

- (c) Disengage the claw and remove the roof headlining hole plug.

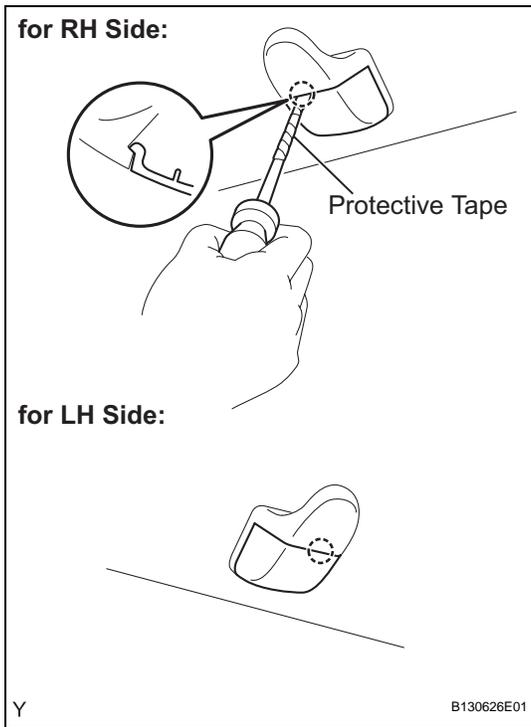


44. REMOVE COAT HOOK


HINT:

Use the same procedure for both sides.

- (a) Using a screwdriver with its tip wrapped in protective tape, disengage the claw and open the cover.

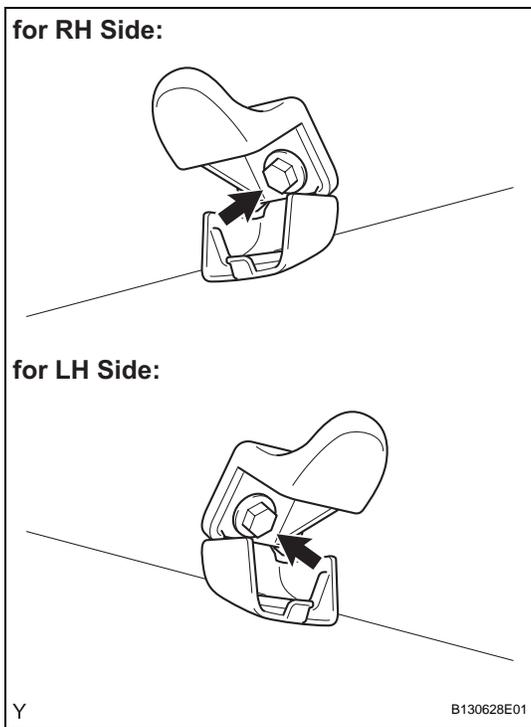

- (b) Remove the bolt and the coat hook.

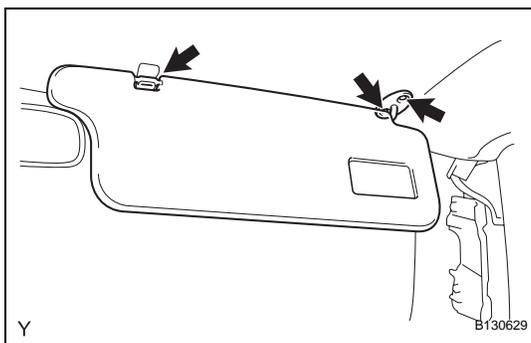

45. REMOVE VISOR ASSEMBLY RH


- (a) Remove the visor support shaft from the visor holder.

- (b) Remove the 2 screws and the visor.

46. REMOVE VISOR ASSEMBLY LH

HINT:

Use the same procedure as for the RH side.

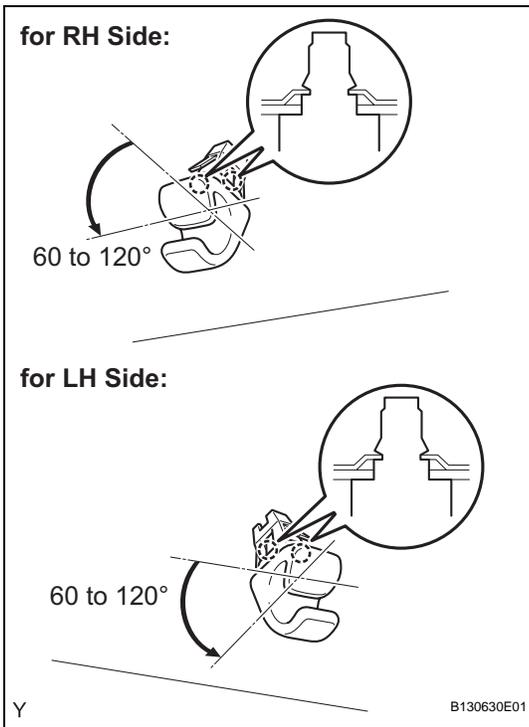

47. REMOVE VISOR HOLDER

HINT:

Use the same procedure for both sides.

- (a) Disengage the 2 claws by turning the visor counterclockwise between 60 to 120° and remove the visor holder.


HINT:

The claw may be damaged during removal.

However, it is reusable because this does not effect its function.

48. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER (See page MI-6)

49. REMOVE INNER REAR VIEW MIRROR ASSEMBLY (See page MI-6)

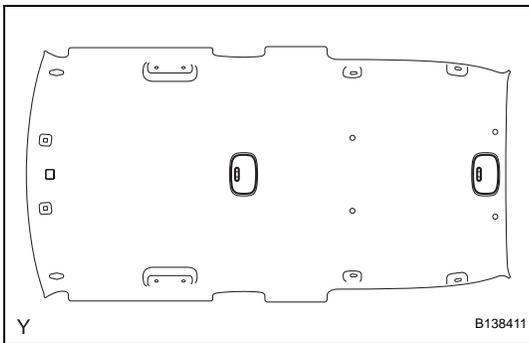



50. REMOVE ROOM LIGHT ASSEMBLY

HINT:

The procedure described below is for the front side. Use the same procedure for both the front and rear sides, unless otherwise specified.

- (a) Using a screwdriver with its tip wrapped in protective tape, disengage the 4 claws and remove the room light lens.

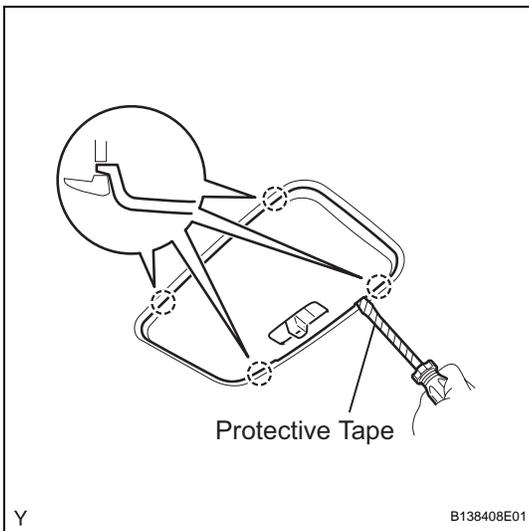


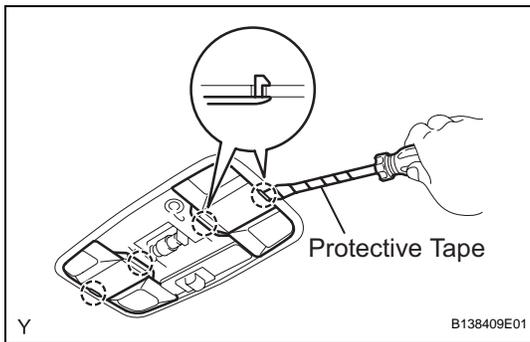


- (b) Using a screwdriver with its tip wrapped in protective tape, disengage the 2 claws and remove the cover.

HINT:

Use the same procedure as for the opposite side.

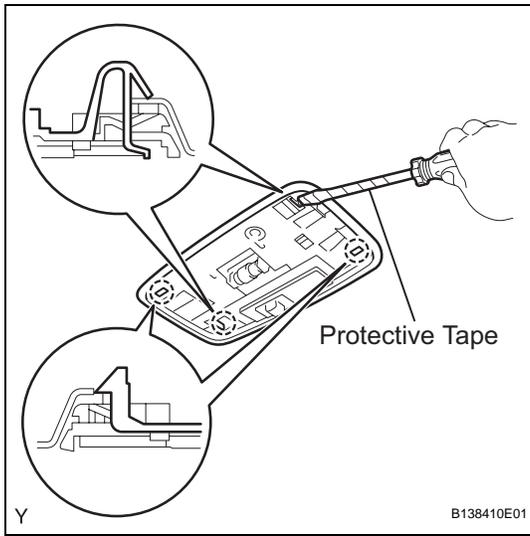


- (c) Using a screwdriver with its tip wrapped in protective tape, disengage the 4 claws and remove the room light.

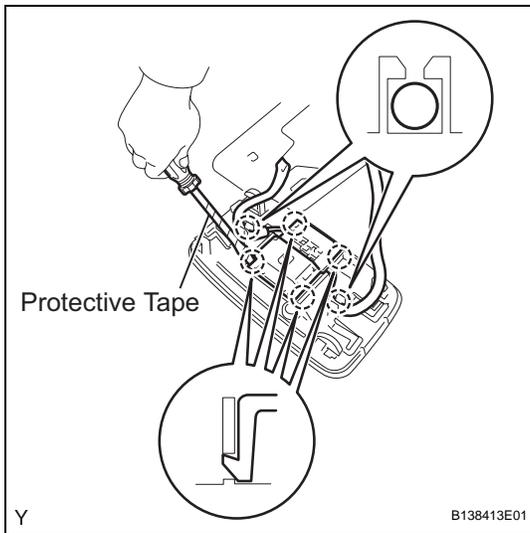

- (d) for Front Side:

- (1) Remove the 2 wire harnesses from the 2 claws of the room light.
- (2) Using a screwdriver with its tip wrapped in protective tape, disengage the 4 claws and remove the room light switch base.

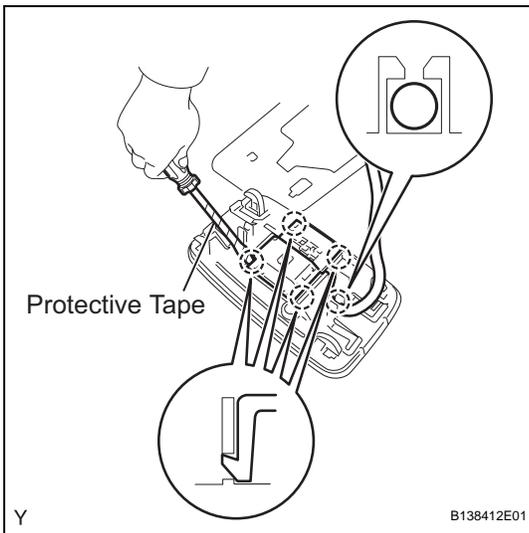


- (e) for Rear Side:
 - (1) Remove the wire harness from the claw of the room light.
 - (2) Using a screwdriver with its tip wrapped in protective tape, disengage the 4 claws and remove the room light switch base.

51. REMOVE INSTRUMENT PANEL REGISTER ASSEMBLY (See page IP-13)


52. REMOVE HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page IP-13)

53. REMOVE INSTRUMENT PANEL FINISH LOWER PANEL SUB-ASSEMBLY (See page IP-14)

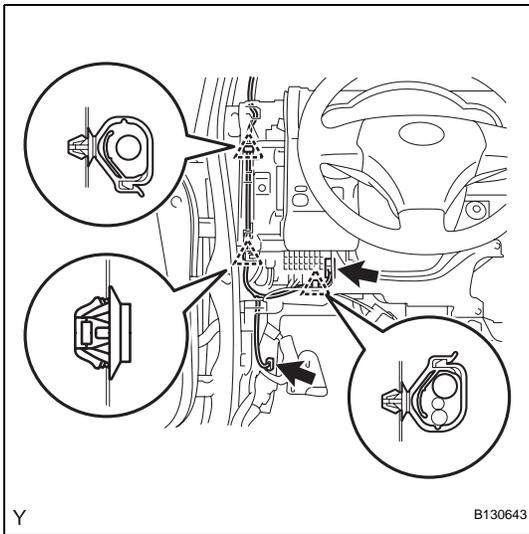


54. REMOVE ROOF HEADLINING

- (a) Remove the wire harness from the 2 clamps.
- (b) Disconnect the 2 connectors.
- (c) Using a clip remover, remove the clamp.

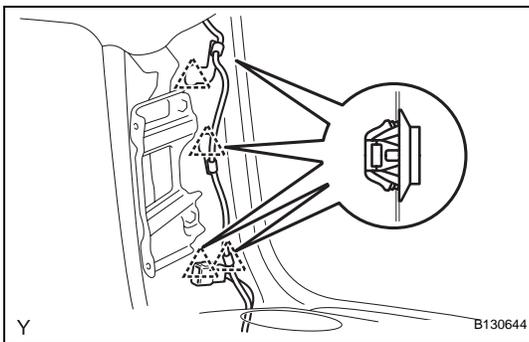


- (d) Using a clip remover, remove the 3 clamps and the connector.

(e) Using a clip remover, remove the 4 clips.

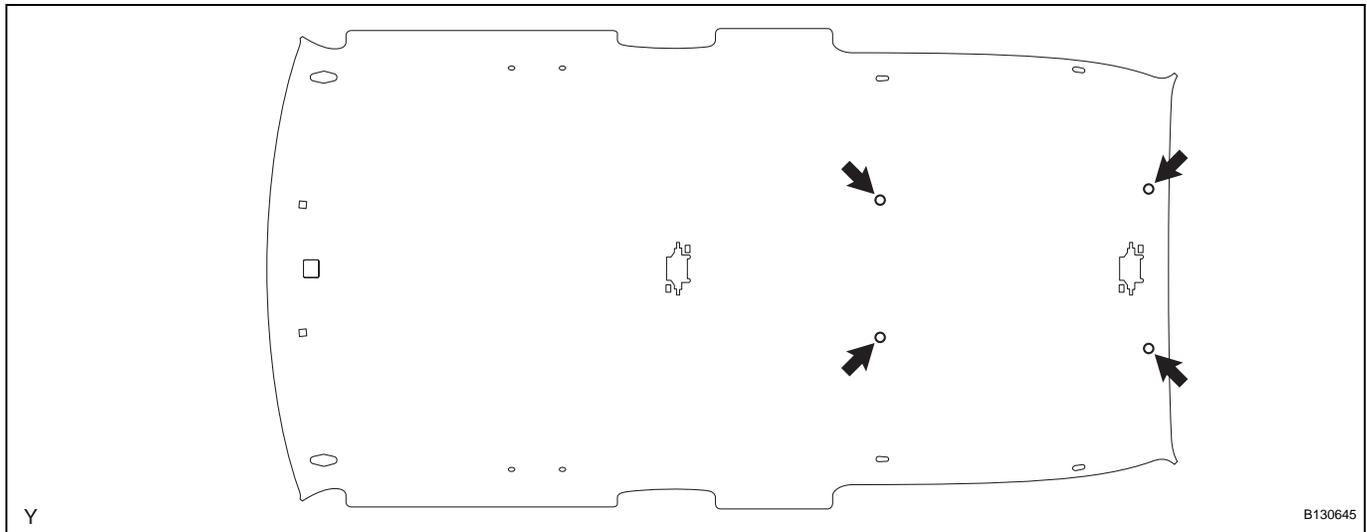

(f) Remove the roof headlining from the back door.

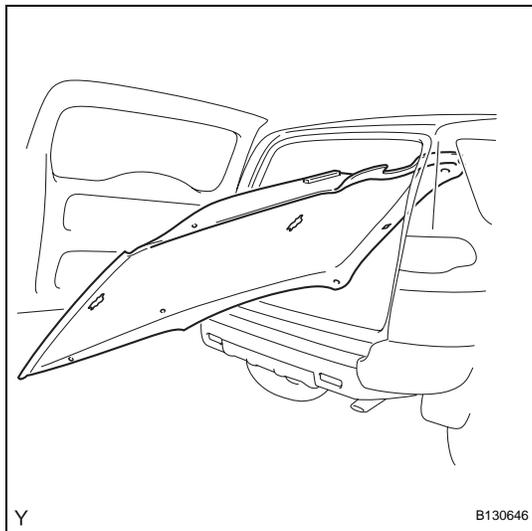

DISASSEMBLY


1. REMOVE ROOF SPEAKER ASSEMBLY

HINT:


Use the same procedure for both sides.

- (a) Disconnect the speaker connector.
- (b) Loosen the screw.

for RH Side:

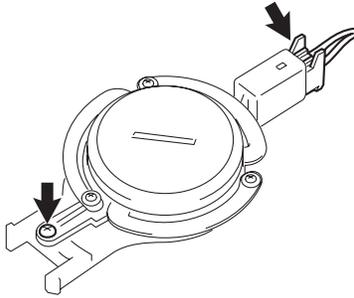

for LH Side:

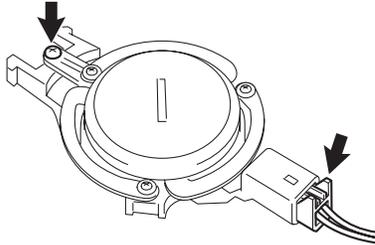


Y


B135049E01

- (c) Remove the roof speaker by turning it in the direction of the arrow shown in the illustration.

for RH Side:

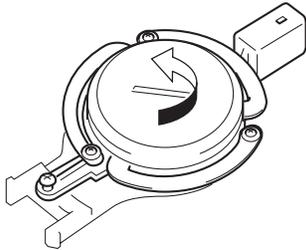

for LH Side:

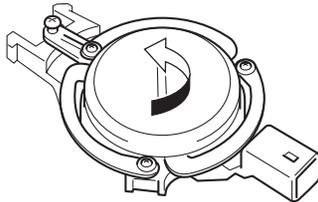


Y


B138632E01

2. REMOVE ROOF SILENCER PAD

(a) Remove the 2 roof silencer pads.

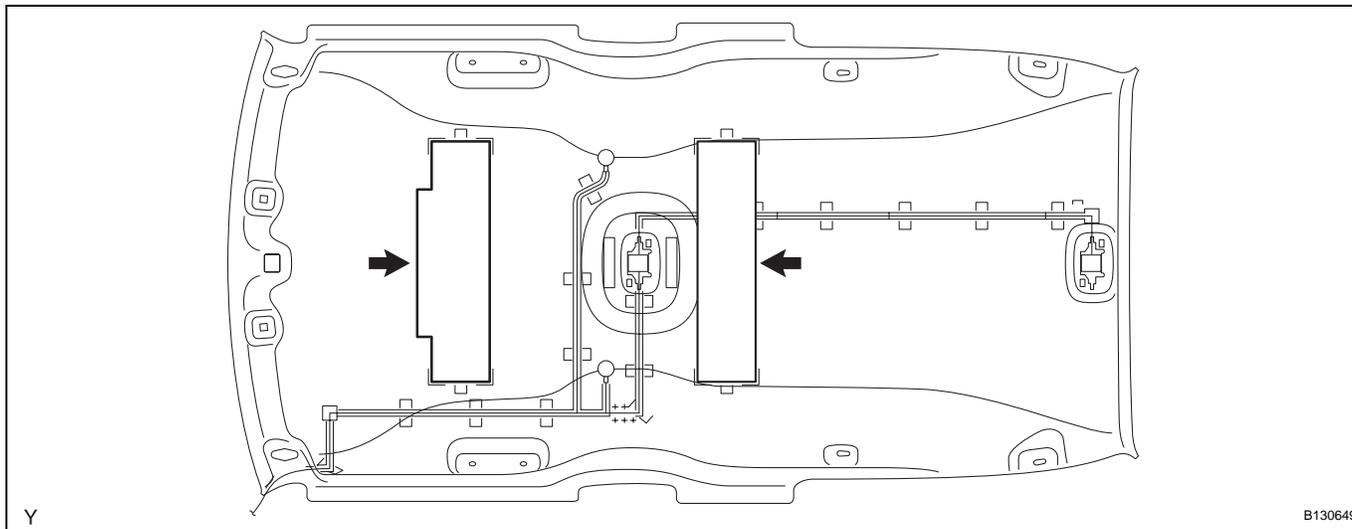**3. REMOVE ROOF WIRE**


(a) Remove the roof wire.

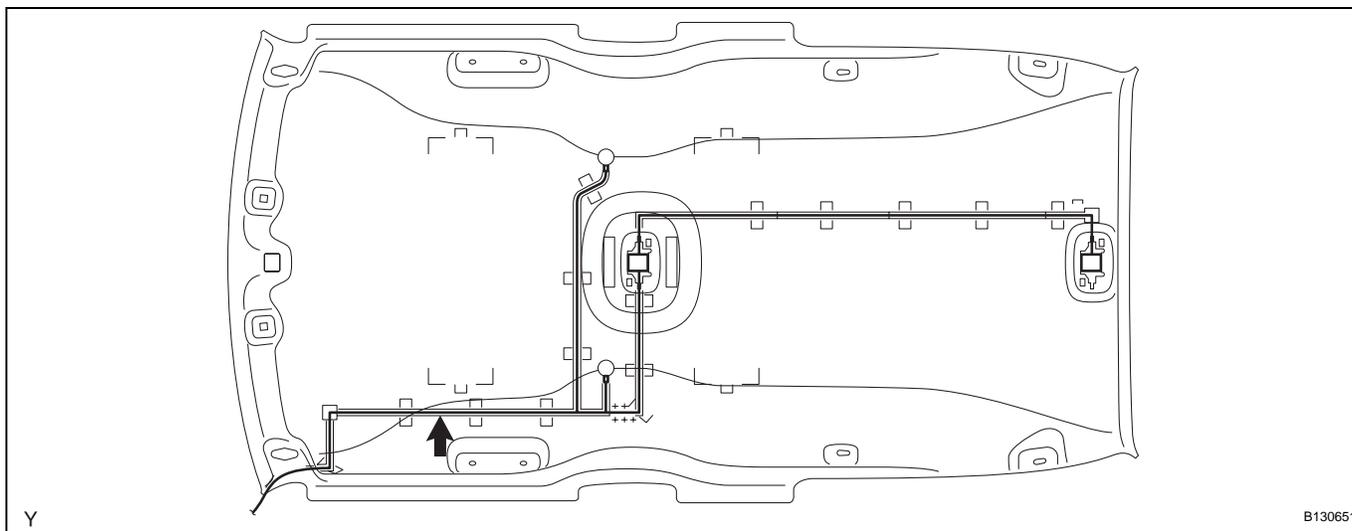

REASSEMBLY

1. INSTALL ROOF WIRE


- (a) Apply new double-sided tape to the roof headlining along the markings of the roof headlining.

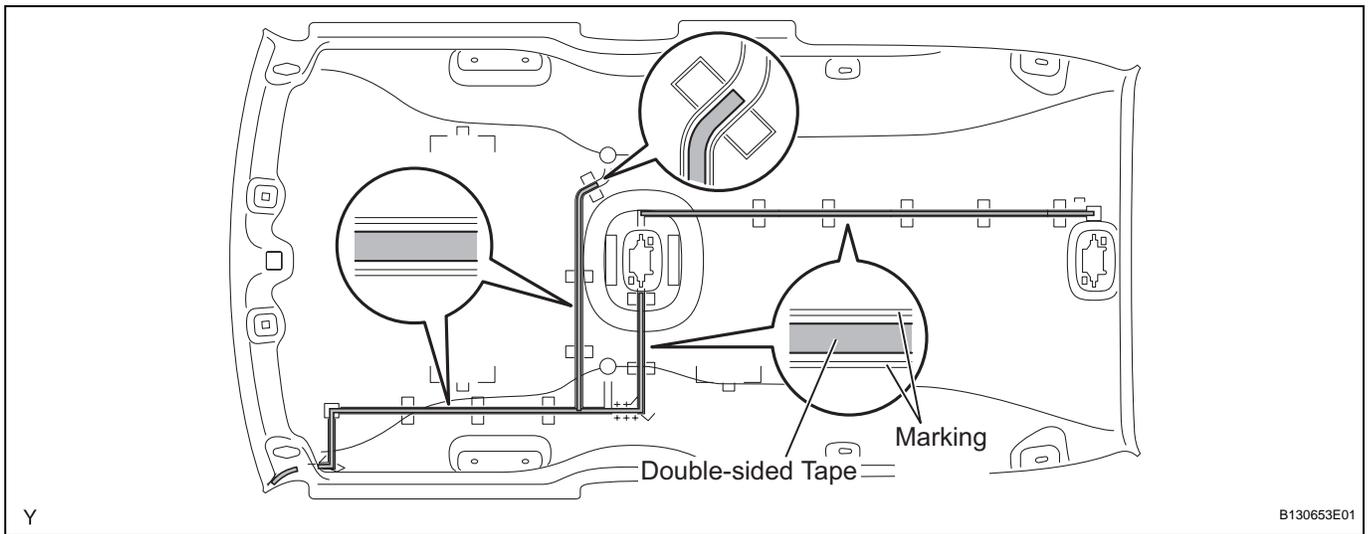

NOTICE:

- Apply the tape securely in place.
- Do not touch the adhesive surface when applying the tape to prevent adhesion failure.

- (b) Install the roof wire as shown in the illustration.

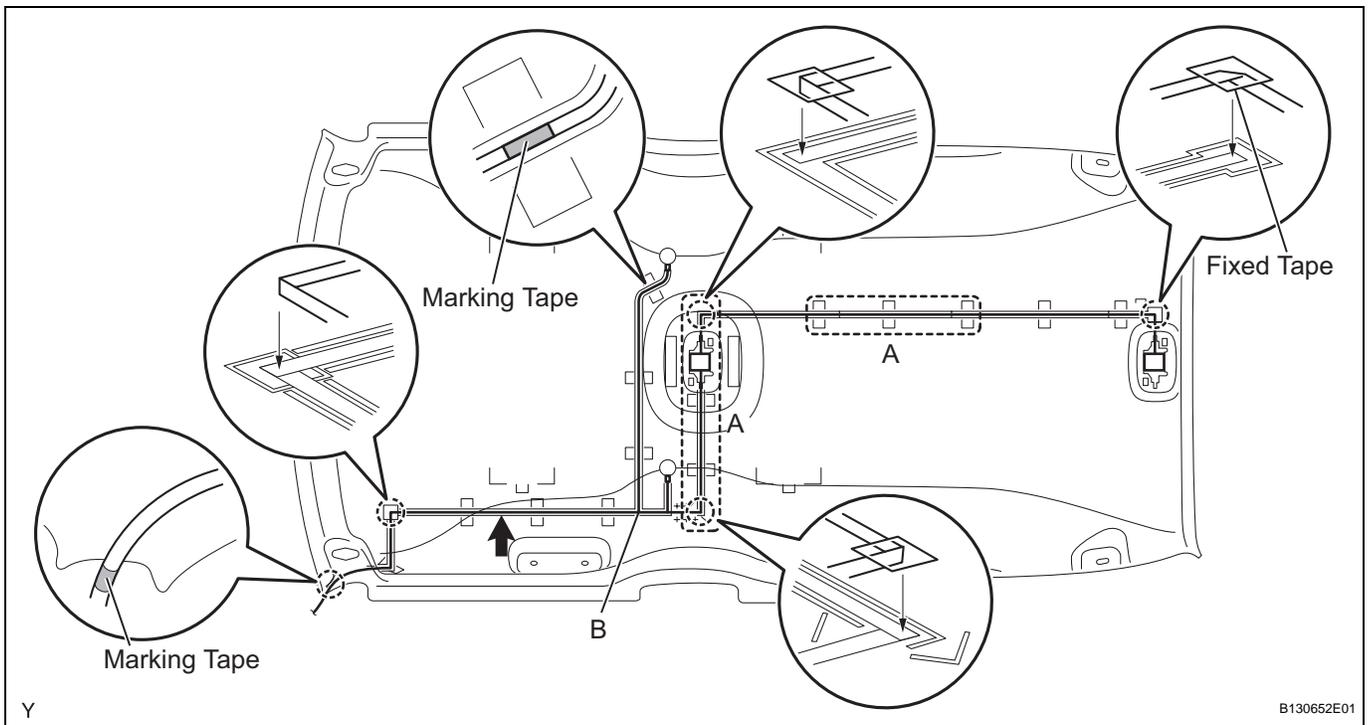


NOTICE:

- Do not twist the flat wire harness when installing it.
- Securely fix the wire harness by pressing it.


- Securely fix the wire harness to secure gap between the wire harness and the roof panel in part A.
- Securely fix the wire harness to avoid looseness in the wire harness between portion B and the marking tape.

2. INSTALL ROOF SILENCER PAD


- (a) Align 2 new roof silencer pads with the markings of the roof headlining and install them onto the roof headlining.

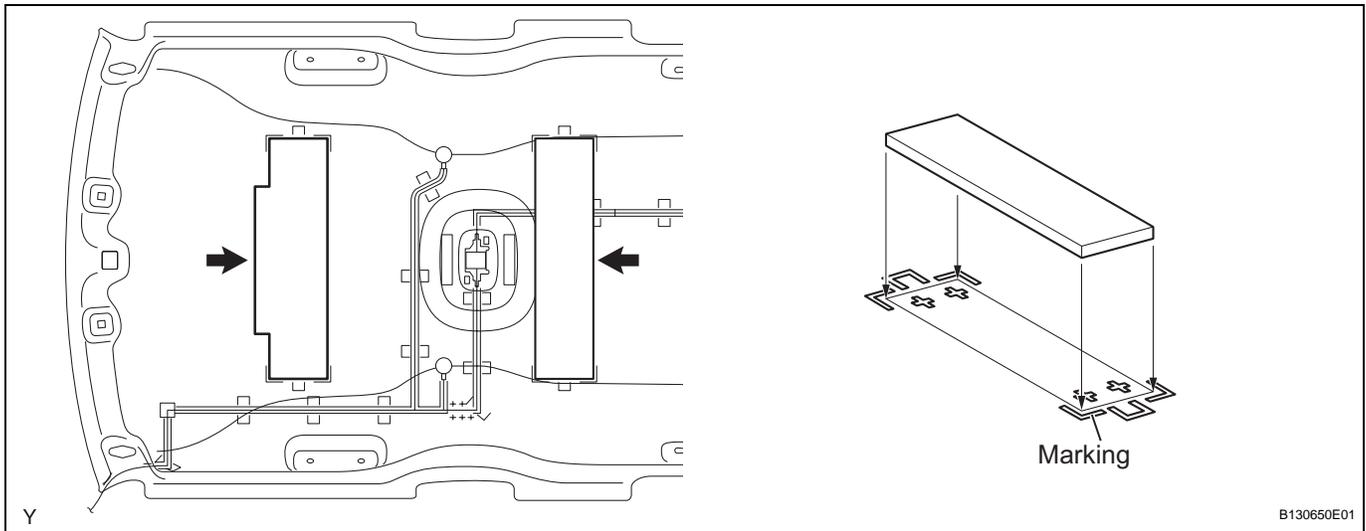

for RH Side:

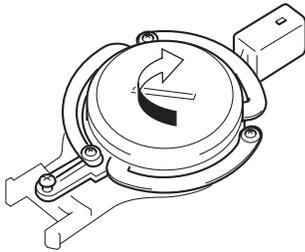

for LH Side:

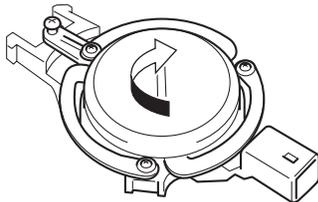


3. INSTALL ROOF SPEAKER ASSEMBLY


HINT:

Use the same procedure for both sides.

- (a) Install the roof speaker by turning it in the direction of the arrow shown in the illustration.

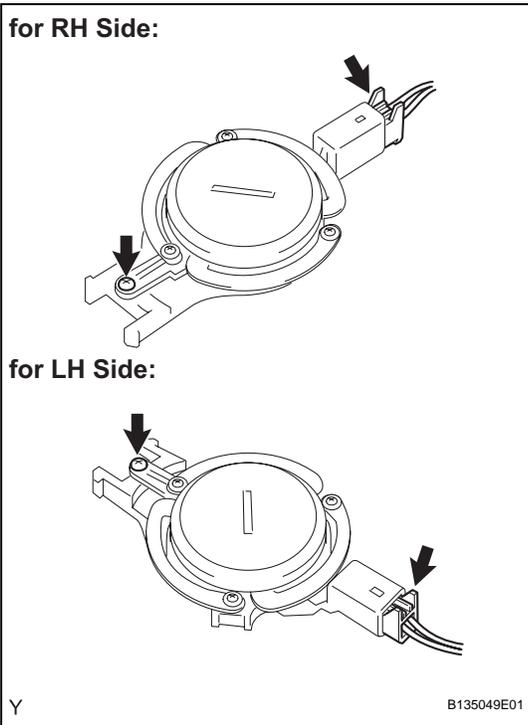



- (b) Tighten the screw.
- (c) Connect the speaker connector.

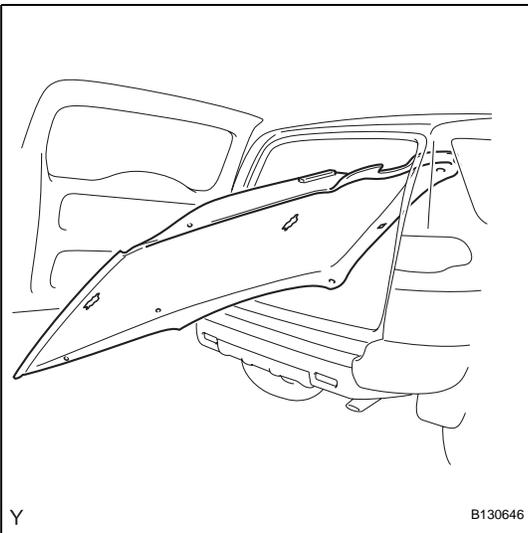


INSTALLATION

1. **INSTALL ROOF HEADLINING**
 - (a) Pull the roof headlining back into the vehicle through the back door.
 - (b) Install the 4 clips.

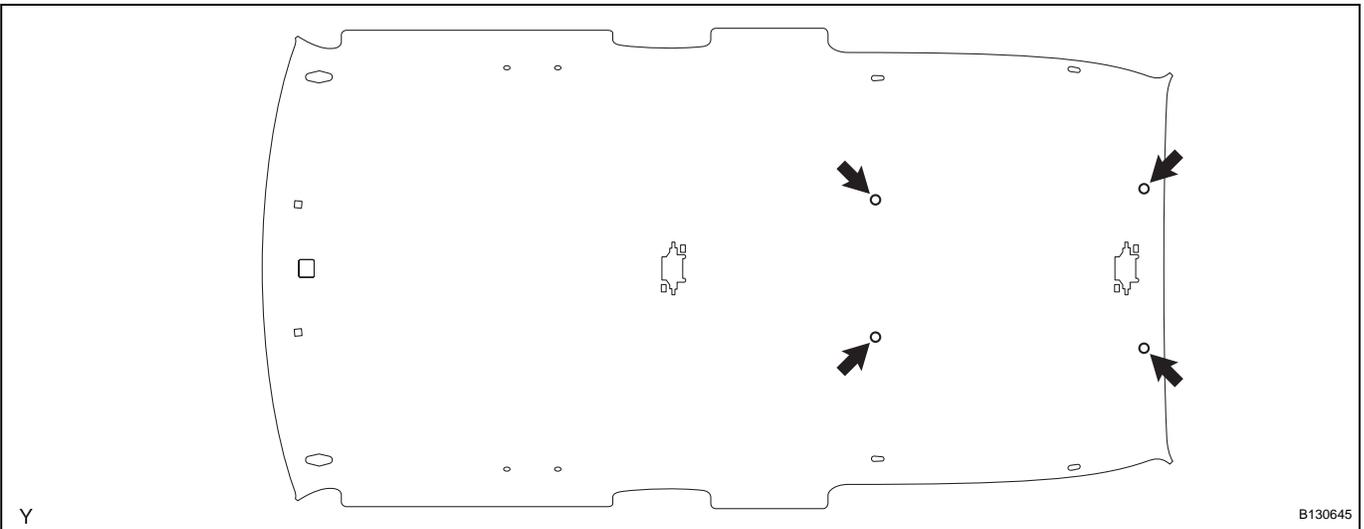

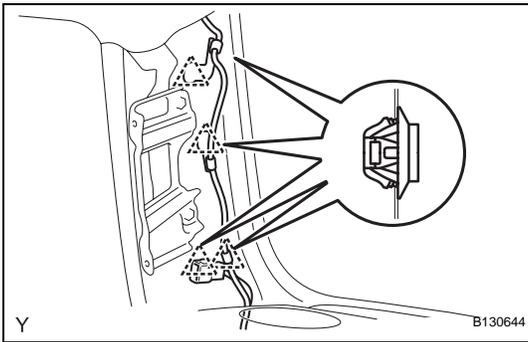

(c) Install the 3 clamps and the connector.

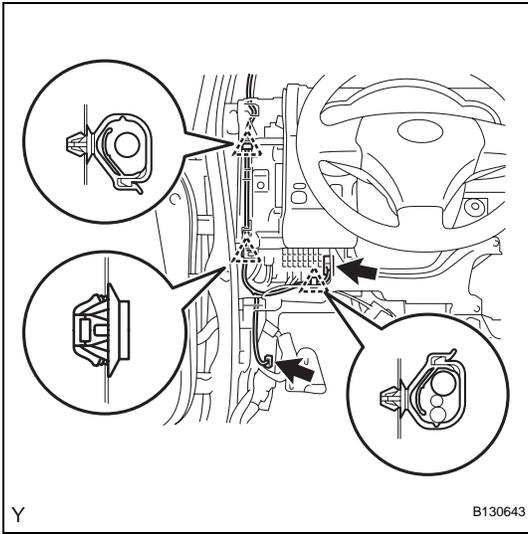

(d) Install the clamp.


(e) Connect the 2 connectors.

(f) Insert the wire harness into the 2 clamps.

2. INSTALL INSTRUMENT PANEL FINISH LOWER PANEL SUB-ASSEMBLY (See page IP-29)

3. INSTALL HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page IP-30)

4. INSTALL INSTRUMENT PANEL REGISTER ASSEMBLY (See page IP-30)

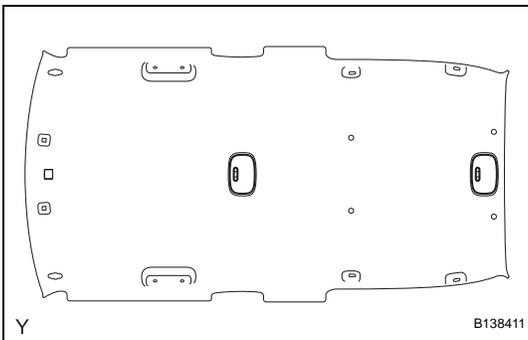


5. INSTALL ROOM LIGHT ASSEMBLY


HINT:

The procedure described below is for the front side. Use the same procedure for both the front and rear sides, unless otherwise specified.


(a) for Front Side:

- (1) Engage the 4 claws and install the room light switch base.
- (2) Insert the 2 wire harnesses into the 2 claws of the room light.

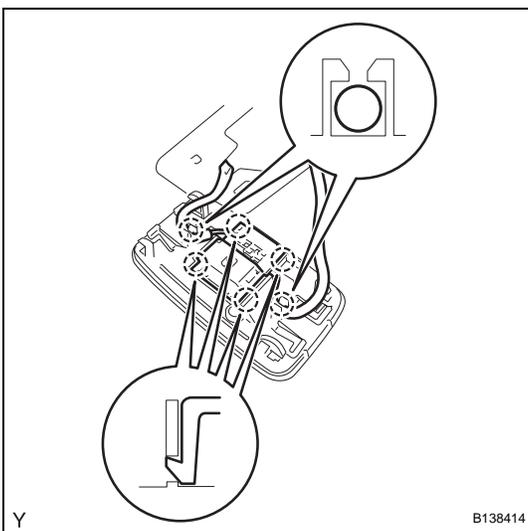


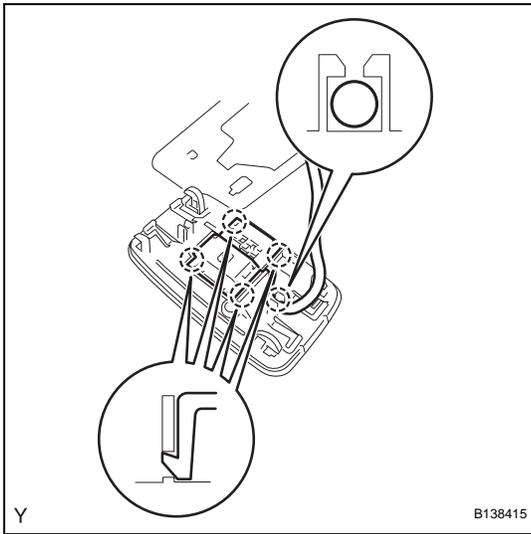


- (b) for Rear Side:
- (1) Engage the 4 claws and install the room light switch base.
 - (2) Insert the wire harness into the claw of the room light.

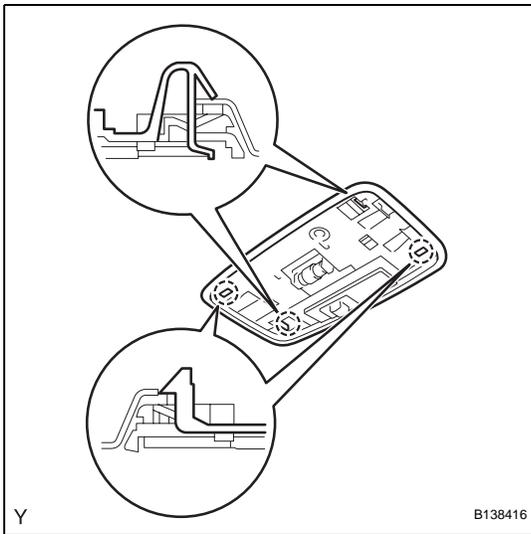

- (c) Engage the 4 claws and install the room light.

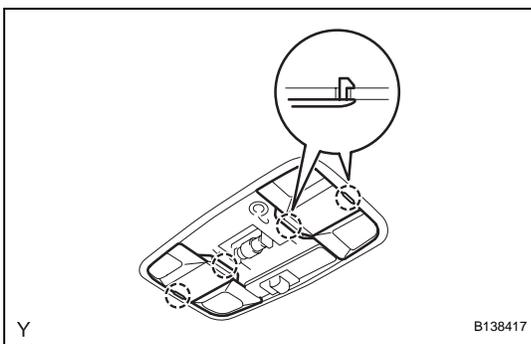


- (d) Engage the 4 claws and install the 2 covers.

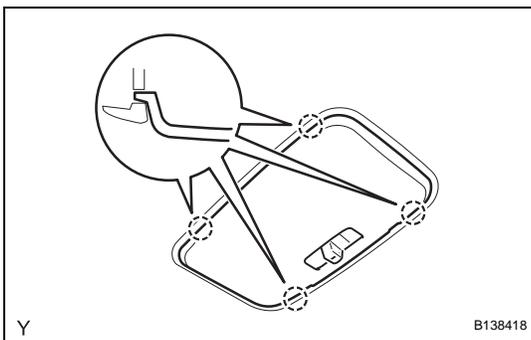

- (e) Engage the 4 claws and install the room light lens.

6. **INSTALL INNER REAR VIEW MIRROR ASSEMBLY**
(See page [MI-6](#))
7. **INSTALL INNER REAR VIEW MIRROR STAY HOLDER COVER**
(See page [MI-6](#))

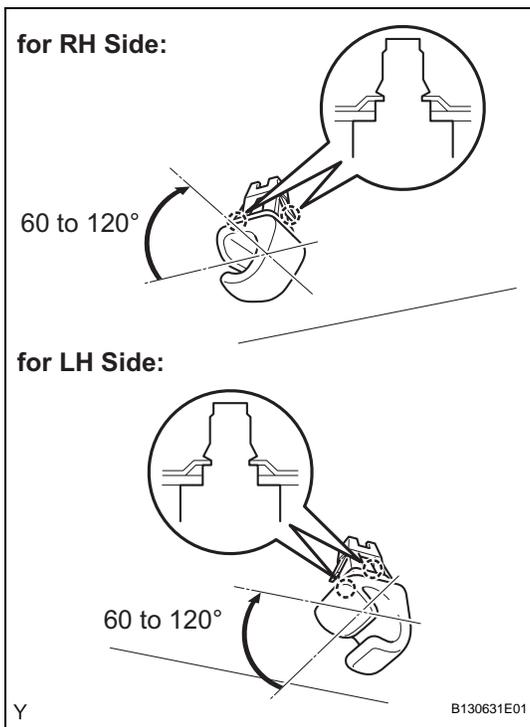


8. INSTALL VISOR HOLDER

HINT:

Use the same procedure for both sides.

- (a) Engage the 2 claws by turning the visor holder clockwise between 60 to 120° and install the visor holder.

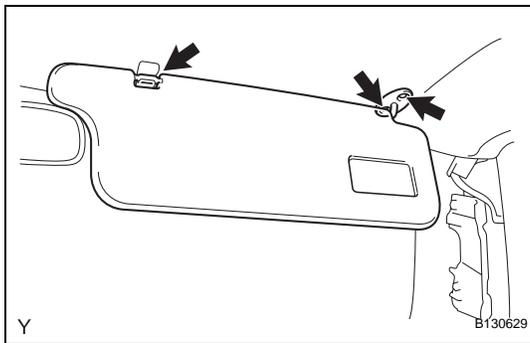

9. INSTALL VISOR ASSEMBLY RH


- (a) Install the visor with the 2 screws.

- (b) Install the visor support shaft into the visor holder.

10. INSTALL VISOR ASSEMBLY LH

HINT:

Use the same procedure as for the RH side.

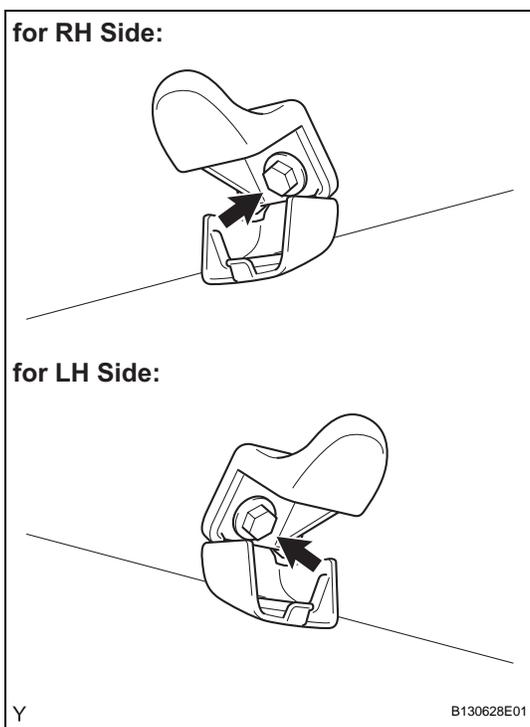


11. INSTALL COAT HOOK


HINT:

Use the same procedure for both sides.

- (a) Install the coat hook with the bolt.

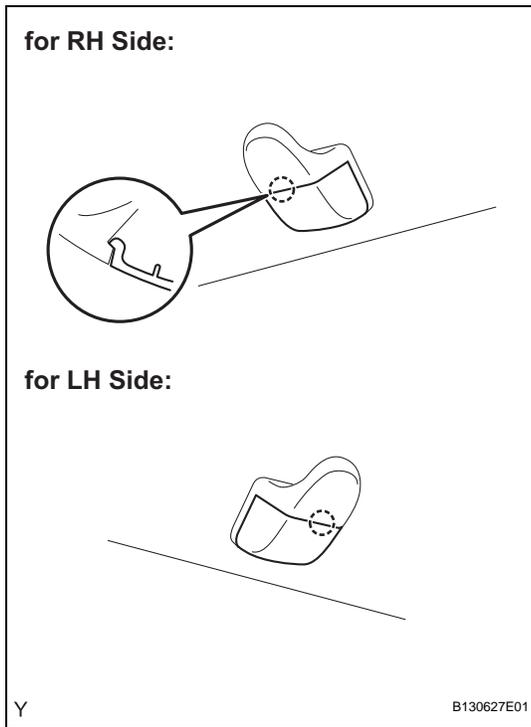

(b) Engage the claw and close the cover.

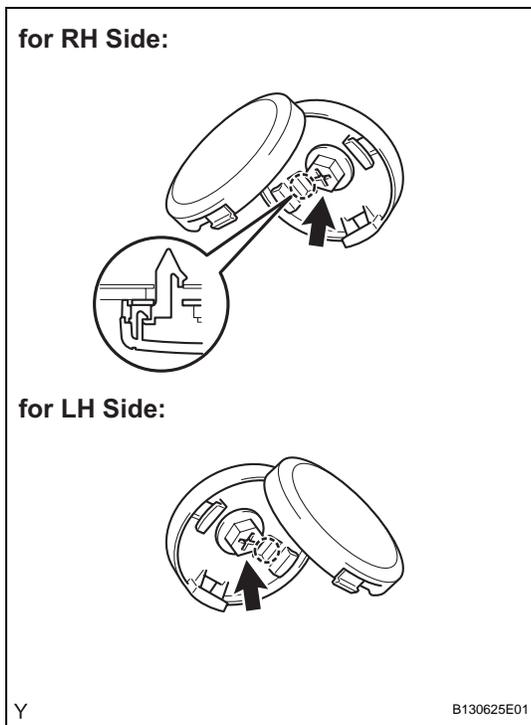


12. INSTALL ROOF HEADLINING HOLE PLUG


HINT:

Use the same procedure for both sides.

- (a) Engage the claw and install the roof headlining hole plug.
- (b) Tighten the bolt.

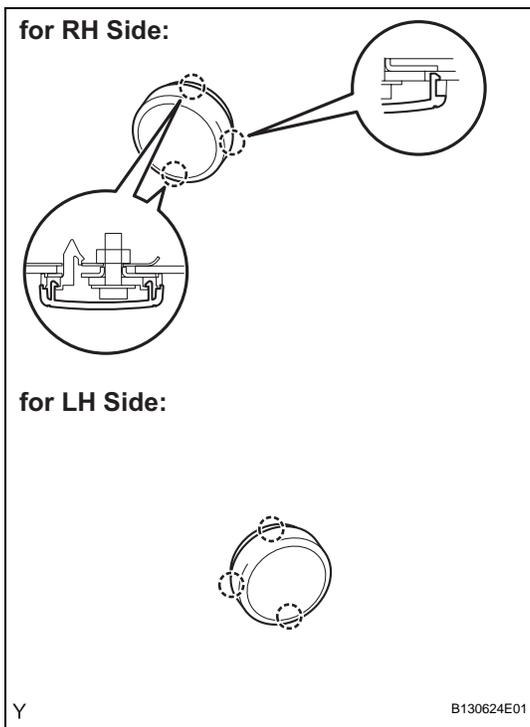


(c) Engage the 3 claws and close the cover.

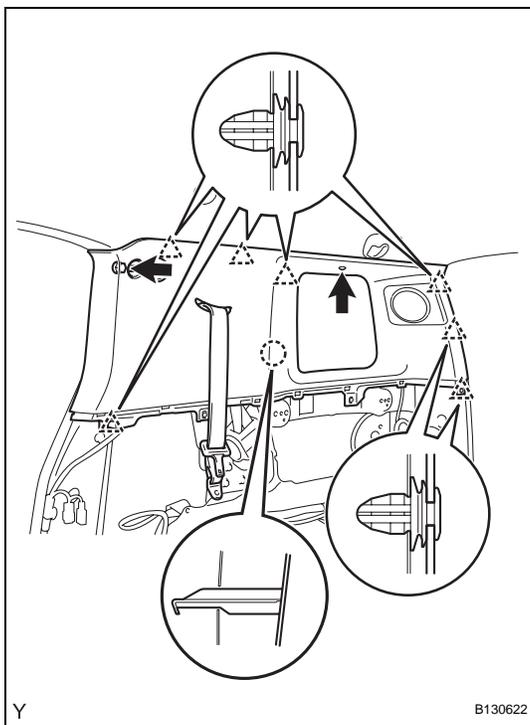

13. INSTALL ROOF SIDE INNER GARNISH RH

- (a) Pass the rear seat outer belt through the slit in the roof side inner garnish.
- (b) Engage the 7 clips and the claw and install the roof side inner garnish.
- (c) Tighten the bolt.
- (d) Install the clip.

(e) Engage the claw and close the cover.

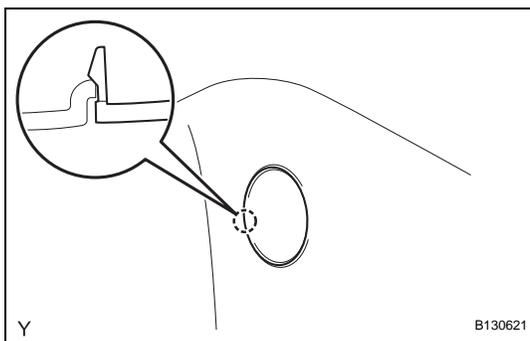


14. INSTALL ROOF SIDE INNER GARNISH LH


HINT:
Use the same procedure as for the RH side.

15. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH

- (a) Engage the 6 clips and the 8 claws and install the deck trim side panel.

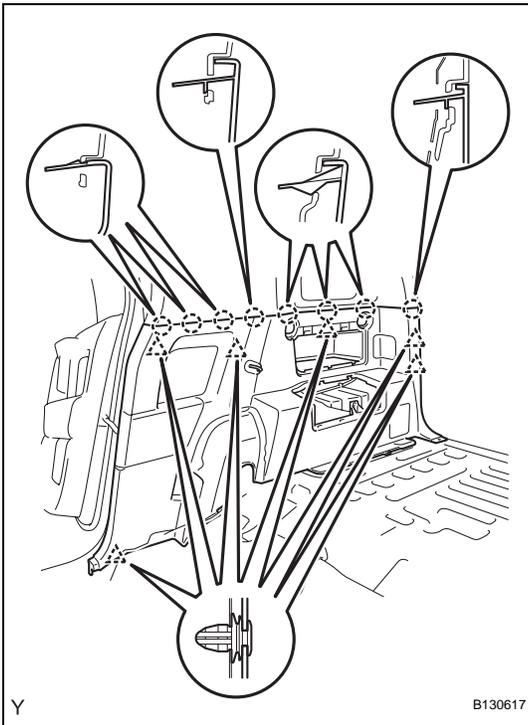



- (b) Tighten the 4 screws.

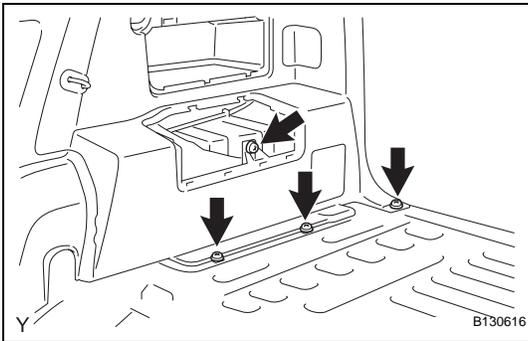


16. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH

- (a) Engage the 6 clips and the 8 claws and install the deck trim side panel.

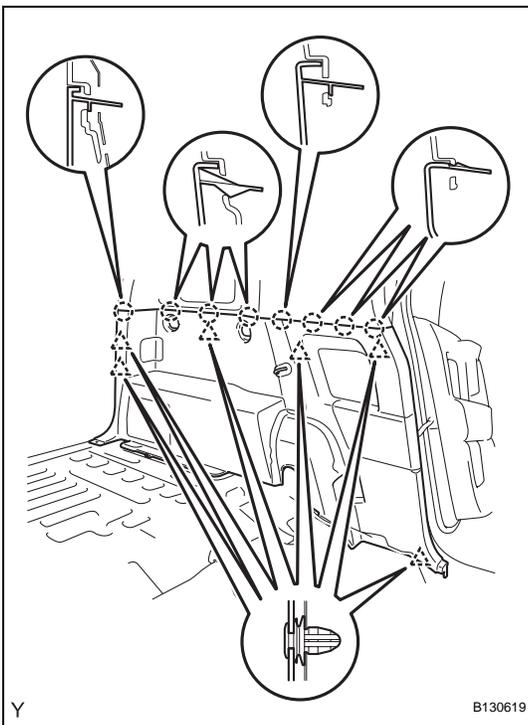

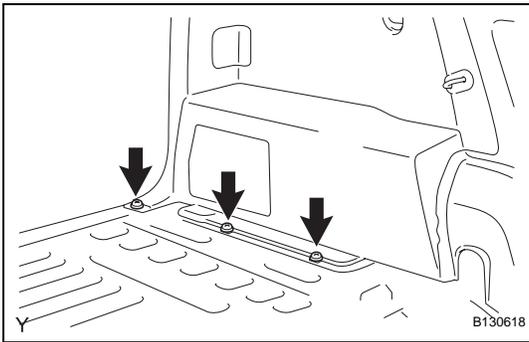


(b) Tighten the 3 screws.

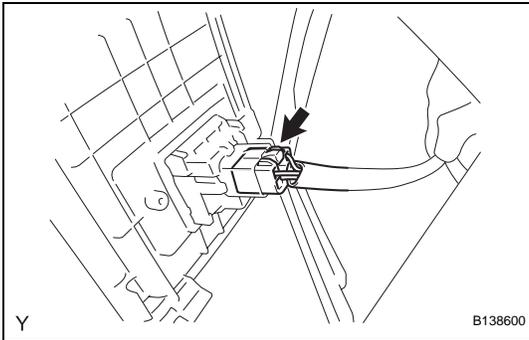


17. INSTALL REAR DECK TRIM COVER (w/ Power Outlet Socket)

(a) Connect the power outlet connector.

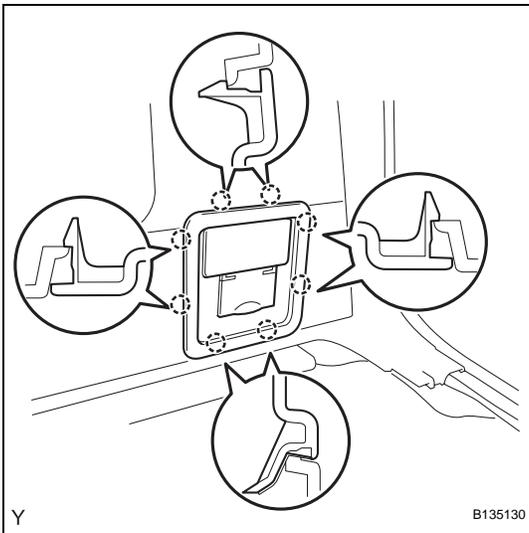

(b) Engage the 8 claws and install the rear deck trim cover.

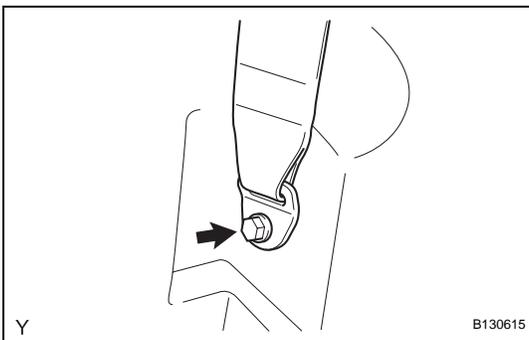

18. INSTALL REAR SEAT OUTER BELT ASSEMBLY RH

(a) Install the anchor plate with the bolt.


Torque: 42 N*m (430 kgf*cm, 31 ft.*lbf)

(b) Make sure that the anchor plate rotates smoothly.

19. INSTALL REAR SEAT OUTER BELT ASSEMBLY LH

HINT:

Use the same procedure as for the RH side.

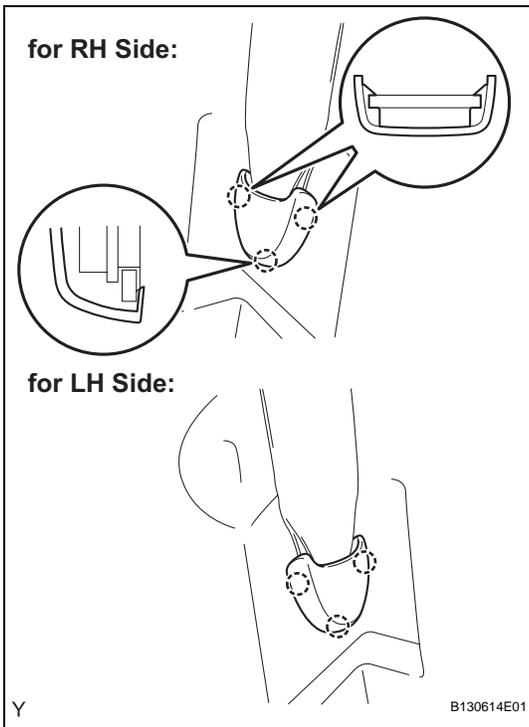

20. INSTALL LAP BELT OUTER ANCHOR COVER


HINT:

Use the same procedure for both sides.

- (a) Engage the 3 claws and install the lap belt outer anchor cover.


21. INSTALL AMPLIFIER BOX SPEAKER ASSEMBLY (w/ Woofer) (See page AV-90)

22. INSTALL SPEAKER MOUNTING COVER (w/ Woofer) (See page AV-91)

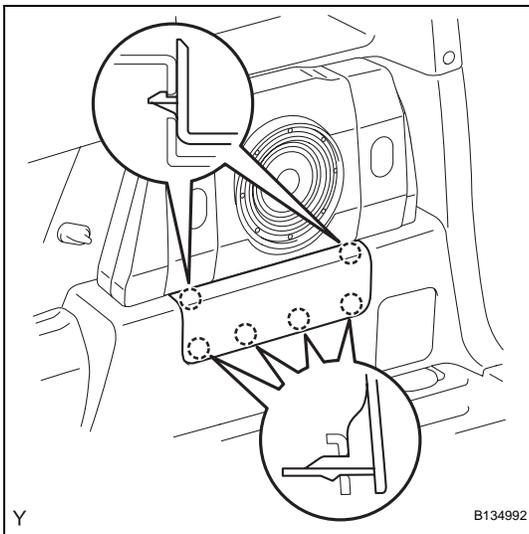


23. INSTALL DECK SIDE GARNISH (w/ Woofer)

- (a) Engage the 6 claws and install the deck side garnish.

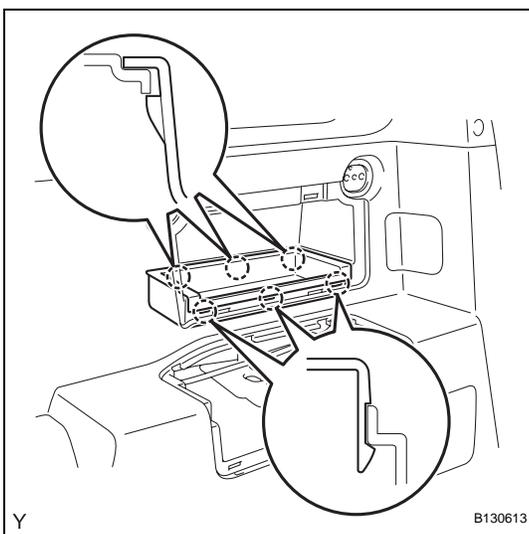


24. INSTALL QUARTER TRIM POCKET (w/o Woofer)

- (a) Engage the 6 claws and install the quarter trim pocket.

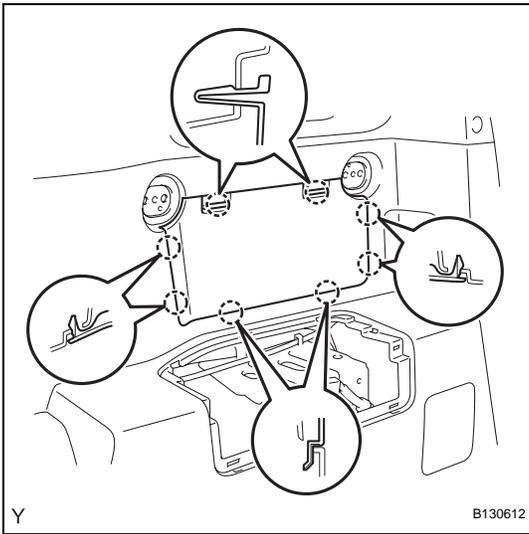


25. INSTALL SIDE TRIM COVER (w/o Woofer)

- (a) Engage the 8 claws and install the side trim cover.

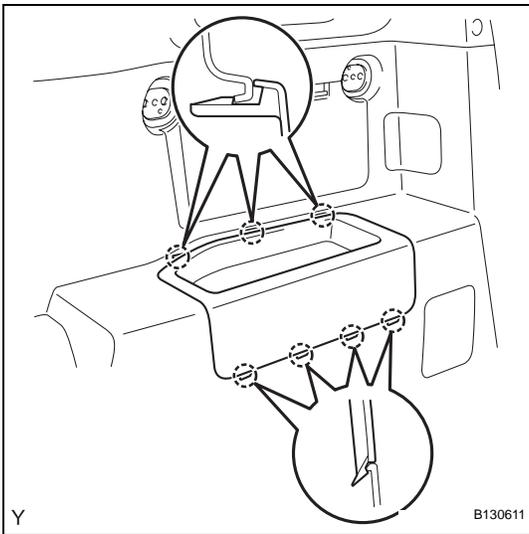

26. INSTALL QUARTER TRIM POCKET TRAY (w/o Woofer)

- (a) Engage the 7 claws and install the quarter trim pocket tray.

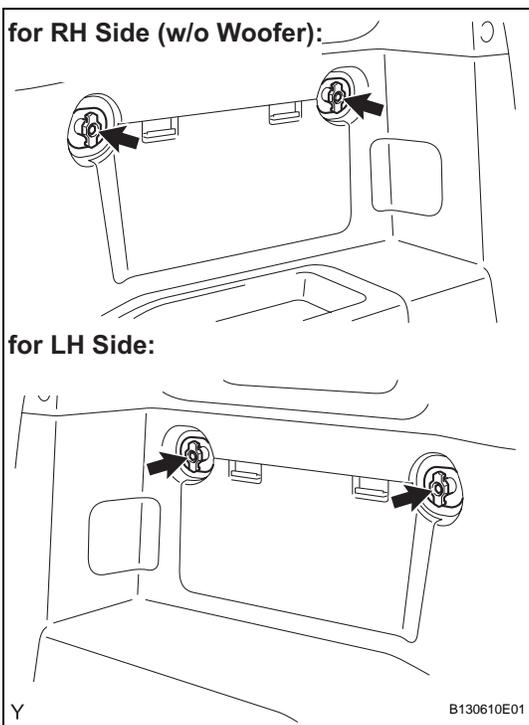


27. INSTALL PACKAGE HOLDER NET HOOK

HINT:

Use the same procedure to install all the package holder net hooks.

- (a) Install the package holder net hook with the screw.

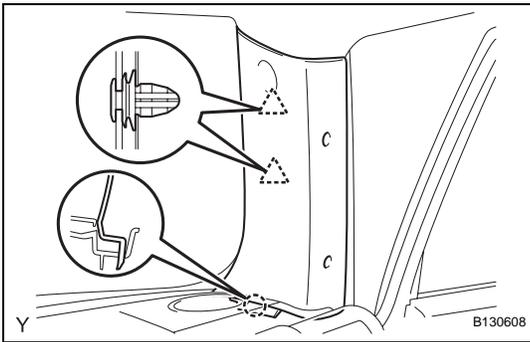


28. INSTALL FRONT PILLAR GARNISH RH

- (a) Engage the claw and the 2 clips and install the front pillar garnish.

29. INSTALL FRONT PILLAR GARNISH LH

HINT:

Use the same procedure as for the RH side.

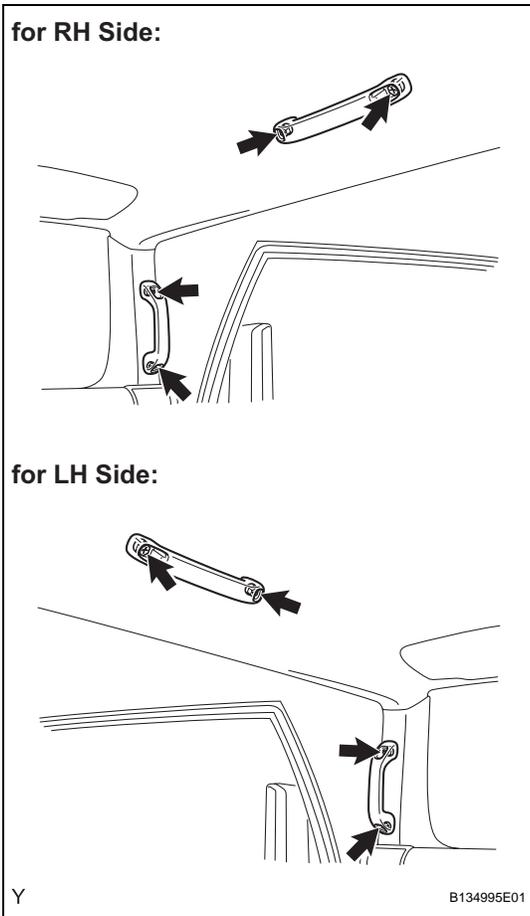


30. INSTALL ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to install all the assist grips.

- (a) Install the assist grip with the 2 bolts.

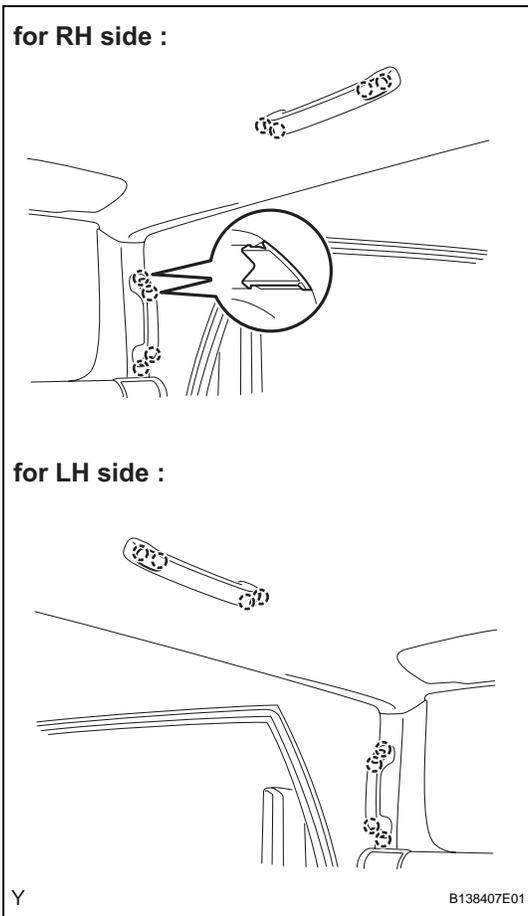


31. INSTALL ASSIST GRIP PLUG

HINT:

Use the same procedure to install all the assist grip plugs.

- (a) Engage the 2 claws and install the assist grip plug.

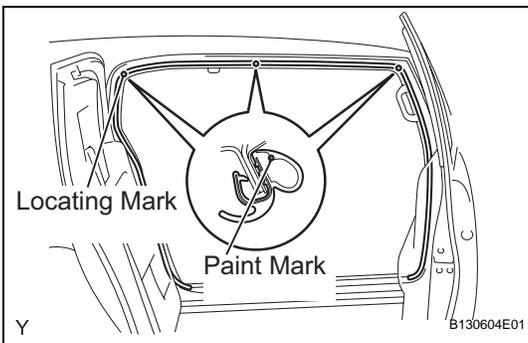

32. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

- (a) Align the locating marks with the paint marks first, and install the front door opening trim weatherstrip, as shown in the illustration.

Paint mark

Area	Color
RH side	White
LH side	Red

33. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

HINT:

Use the same procedure as for the RH side.


34. INSTALL ROOF SIDE RAIL GARNISH RH


- (a) Engage the 2 claws and install the roof side rail garnish.
- (b) Tighten the 2 bolts.

35. INSTALL ROOF SIDE RAIL GARNISH LH

HINT:

Use the same procedure as for the RH side.

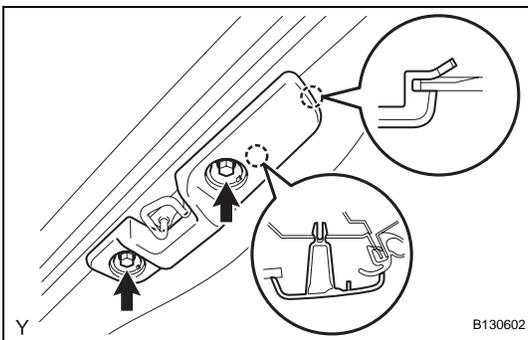

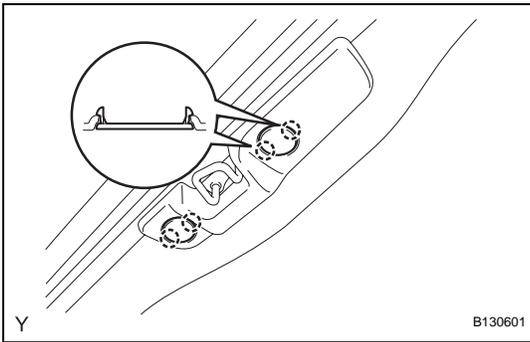

36. INSTALL ROOF SIDE INNER GARNISH COVER RH

HINT:


Use the same procedure for both sides.

- (a) Engage the 2 claws and install the roof side inner garnish cover.

37. INSTALL ROOF SIDE INNER GARNISH COVER LH

HINT:

Use the same procedure as for the RH side.

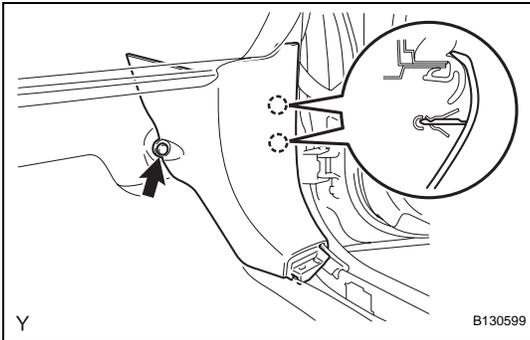

38. INSTALL COWL SIDE TRIM BOARD RH

- (a) Engage the 2 claws and install the cowl side trim board.
- (b) Install the clip.


39. INSTALL COWL SIDE TRIM BOARD LH

HINT:

Use the same procedure as for the RH side.

40. INSTALL FOOTREST CLIP (See page IR-2)

41. INSTALL FRONT FLOOR FOOTREST (See page IR-2)

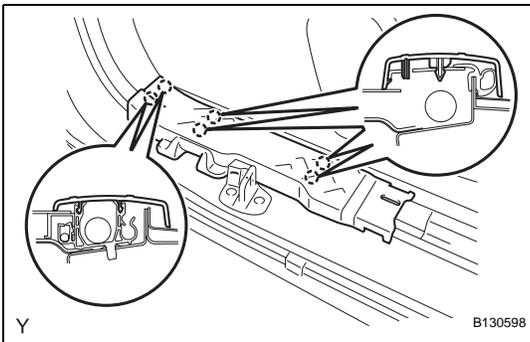


42. INSTALL ACCESS DOOR SCUFF PLATE RH

- (a) Engage the 6 claws and install the access door scuff plate.

43. INSTALL ACCESS DOOR SCUFF PLATE LH

HINT:

Use the same procedure as for the RH side.

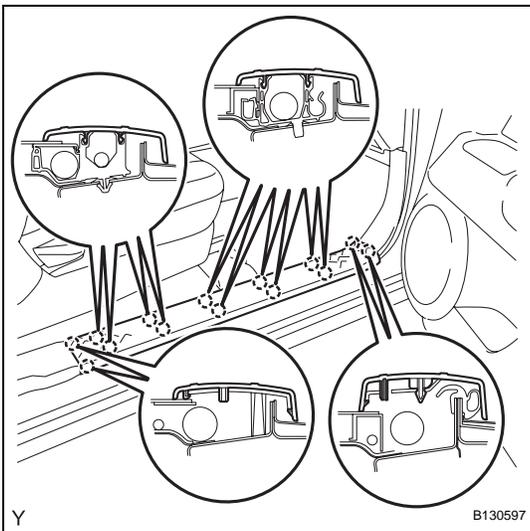


44. INSTALL FRONT DOOR SCUFF PLATE RH

- (a) Engage the 14 claws and install the door scuff plate.


45. INSTALL FRONT DOOR SCUFF PLATE LH

HINT:


Use the same procedure as for the RH side.

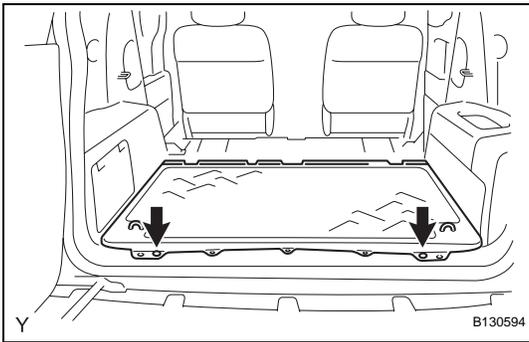


- 46. INSTALL REAR FLOOR MAT ASSEMBLY**
 (a) Install the rear floor mat with the 2 clips.

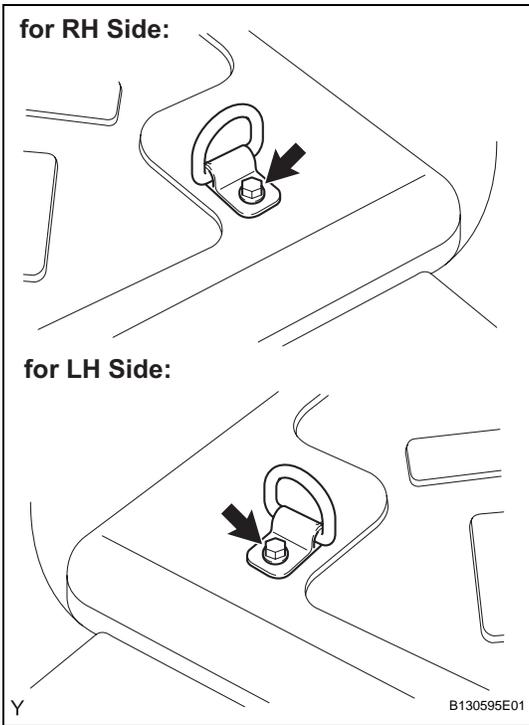


- 47. INSTALL LUGGAGE HOLD BELT STRIKER ASSEMBLY**
HINT:
 Use the same procedure for both sides.
 (a) Install the luggage hold belt striker with the bolt.

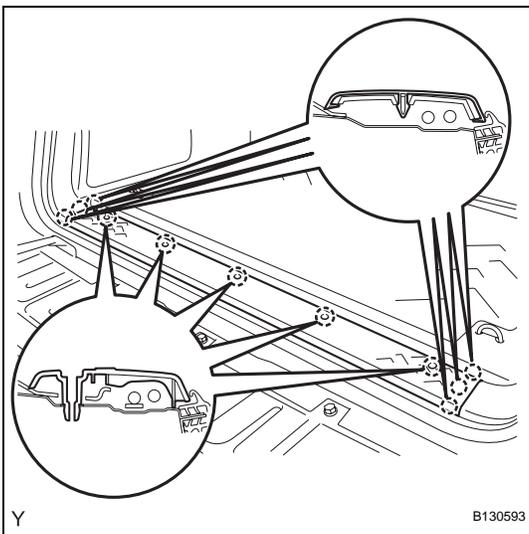

- 48. INSTALL REAR FLOOR MAT SUPPORT PLATE**
 (a) Engage the 11 claws and install the rear floor mat support plate.

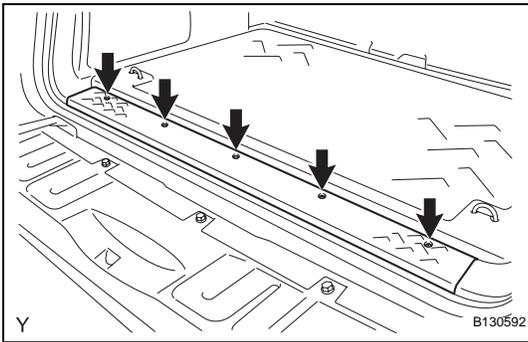


(b) Tighten the 5 screws.

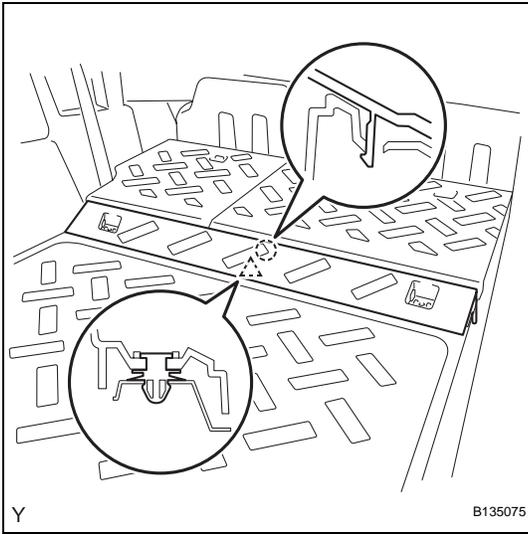

49. INSTALL REAR FLOOR BOARD

(a) Engage the clip and claw and install the rear floor board.

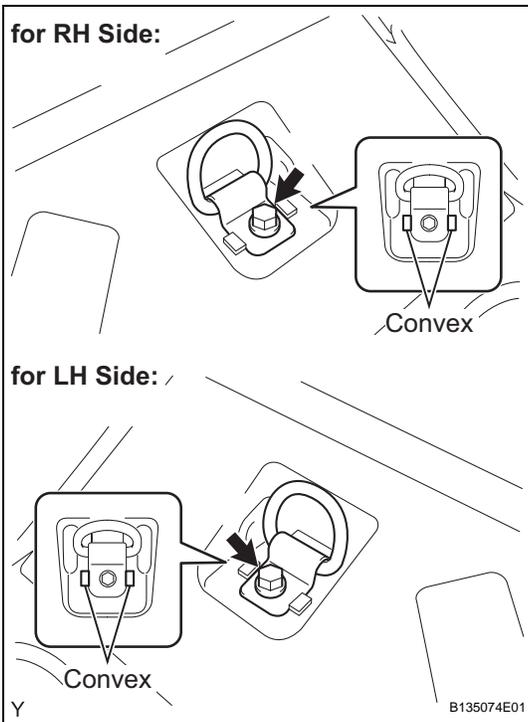

(b) Install the luggage hold belt striker with the bolt.
HINT:
Use the same procedure for both sides.

50. INSTALL REAR SEATBACK ASSEMBLY RH (See page SE-54)

51. INSTALL REAR SEATBACK BOARD CARPET ASSEMBLY RH (See page SE-54)

52. INSTALL REAR SEATBACK ASSEMBLY LH (See page SE-38)

53. INSTALL REAR SEATBACK BOARD CARPET ASSEMBLY LH (See page SE-38)

54. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)